



82-0505 R and R radio

Preliminary work:
Ashtray removed (54-391).

A. Radio with universal mount (Becker)

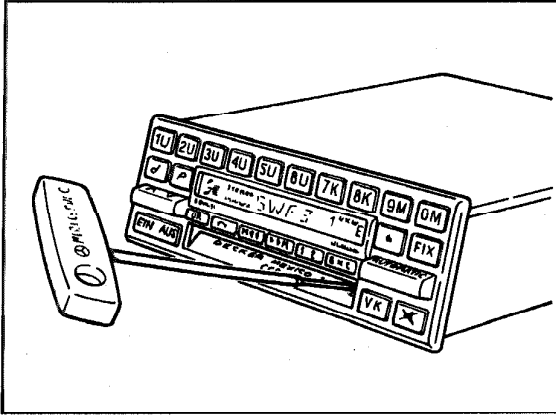

P82-2686-13

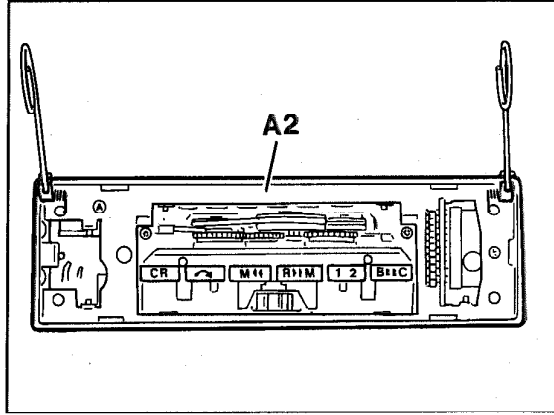

P82-2552-13

Radio front panel

remove, press on.
Withdrawal hook 140 589 02 33 00.

Clamping lever

⚠ CAUTION!
Pull off only in the area indicated to avoid
damaging the front panel.
pull down with assembly eyes or 1 mm dia.
wire.

Radio


remove, insert.

Electrical connections, antenna and speaker
cables

disconnect, reconnect.

Note
If the standard radio mountings are fitted to the
vehicle, remove the universal mountings on the
radio before installing.


Special tools

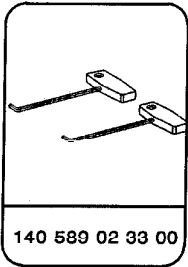

B. General

On vehicles with sound system ensure that the line-out unit is transferred when replacing the radio set.


- A2 Radio
- A2/1 Line-out unit sound system

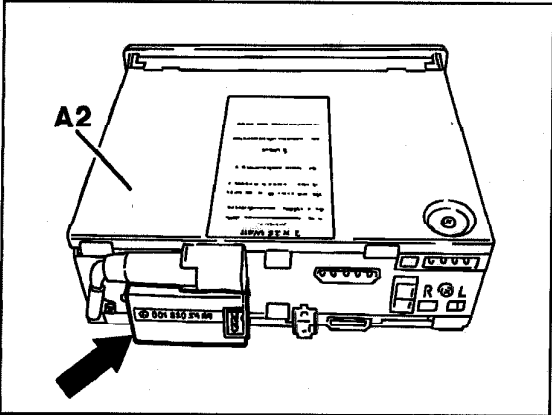

P82-2283-13

As of model year 1986

If the radio is removed when the anti-theft warning system is switched on, the set is rendered unusable and cannot operate again until repaired at a Becker service point.

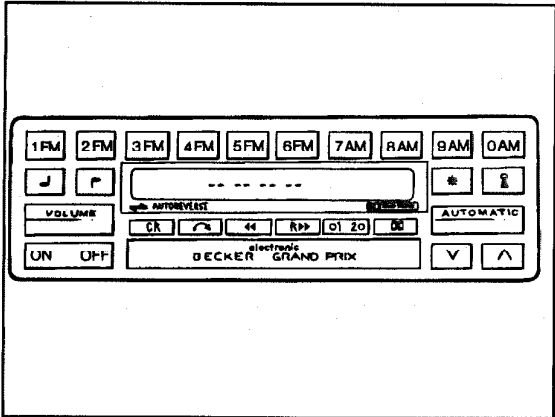


P82-2423-13

82-0505 R and R radio

As of model year 1990

The Becker Grand Prix radio is replaced by the Mercedes-Benz radio which differs in the following respects:

- Improved reception properties in the FM range
- AM reception in mono only
- Station search two-stage only
- Fixed anti-theft coding.

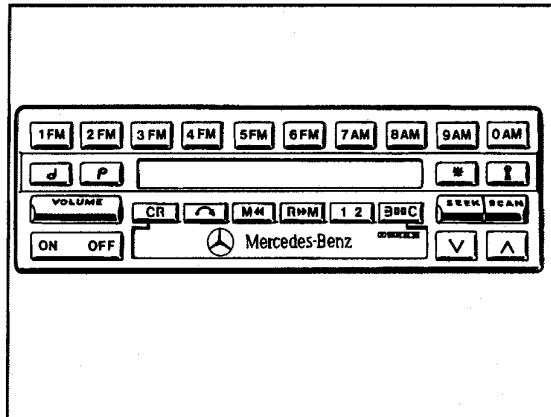

P82-2069-13


Note

When the key in the steering wheel lock is turned back from position 1 to position 0, the Becker Grand Prix 2000 radios remain on for a further three seconds approximately. These radios can be switched on and off additionally when the key is removed by pressing the on/off button. The radio switches off automatically after one hour. It can then be switched on again. The power is supplied through terminal 30.

C. Coding radio (4-digit fixed code)


1. If the radio is separated from the power supply, it is ready to function when it is reconnected. After switching on the ignition and the radio the word CODE appears on the display.
2. The code number for this radio is indicated on the enclosed CODE CARD.
3. To enter the first digit of the code number press the station key -1- until the correct number appears on the display. Repeat this sequence for the second, third and fourth numbers.
4. After entry of the correct code with station buttons 1, 2, 3, 4 and confirmation with the search button (downward) the word CODE disappears. The radio is then ready for operation.
5. After entry of the incorrect code number three times reentry can be accomplished only after waiting 15 minutes. Moreover, access is denied for 24 hours after nine incorrect entries. During this waiting time the radio and ignition (terminal 15) must remain switched on.

A CODE CARD is included in duplicate with each radio set or radio control stage indicating the model, serial number and code number of the radio set or radio control stage.

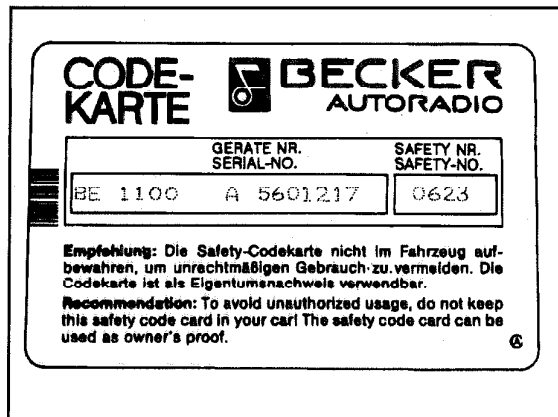

P82-5115-13A

An identification card containing the serial number is included for the receiver and amplifier stage on two-component radio sets and CD player with changer.

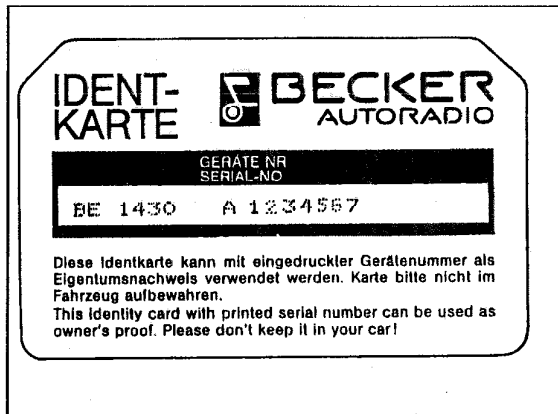

P82-5242-13