


# 82-0805 Wiring diagrams seat heater with automatic shut-off


## A. Version up to 09/87

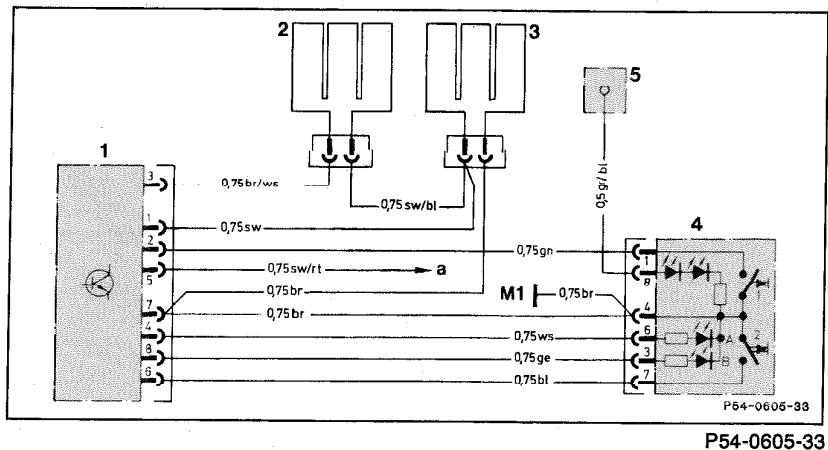

### Wiring diagram left or right front

- |   |                          |    |                             |
|---|--------------------------|----|-----------------------------|
| 1 | Relay seat heater        | 5  | Terminal block terminal 58d |
| 2 | Heating cushion seat     | M1 | Starter                     |
| 3 | Heating cushion backrest | a  | To fuse no. 9 terminal 15R  |
| 4 | Switch seat heater       |    |                             |
|   | Stage 1 low              |    |                             |
|   | Stage 2 high             |    |                             |

## 82-0805 Wiring diagrams seat heater with automatic shut-off

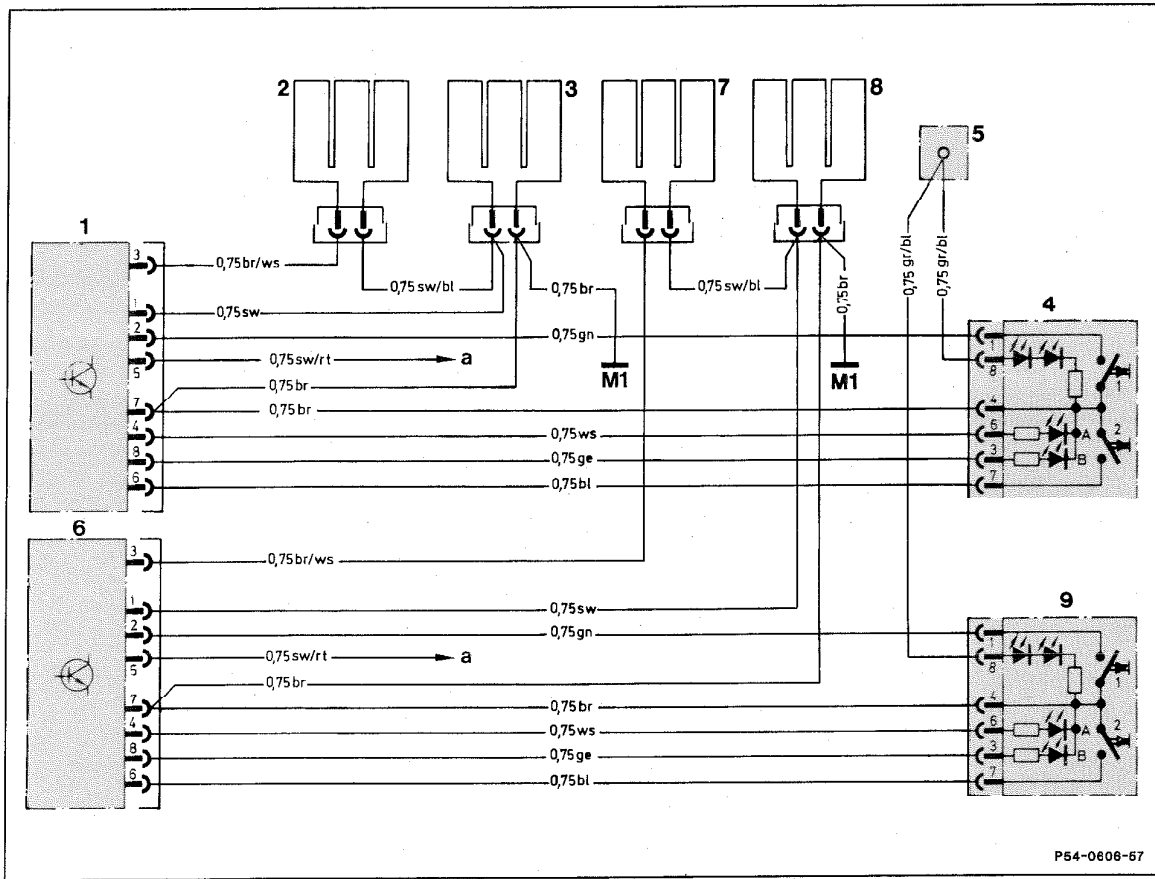

P54-0606-57

### Wiring diagram rear seat heater


1	Relay seat heater left	7	Heating cushion seat right
2	Heating cushion seat left	8	Heating cushion backrest right
3	Heating cushion backrest left	9	Switch seat heater right
4	Switch seat heater left		Stage 1 low
	Stage 1 low		Stage 2 high
	Stage 2 high	M1	Starter
5	Terminal block terminal 58d	a	Fuse no. 14 terminal 15
6	Relay seat heater right		

# 82-0805 Wiring diagrams seat heater with automatic shut-off

## B. Version as of 09/87

Vehicle ident end no. 368 215

Seat heater for seat front left and right

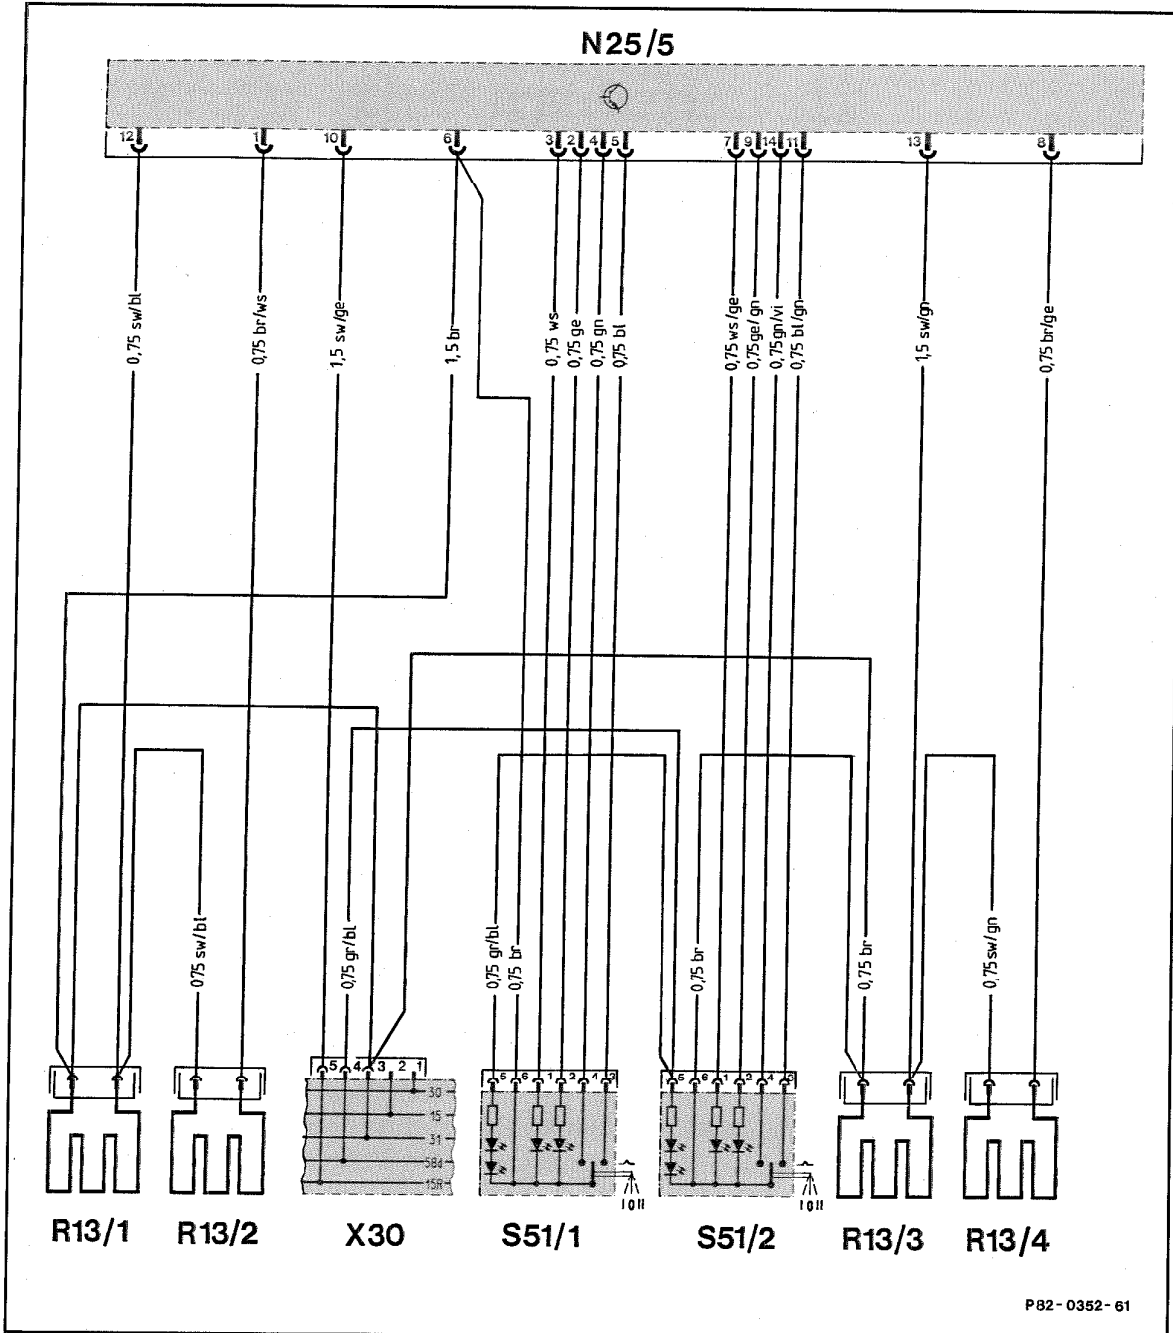

P82-0352-61

P82-0352-61


N25/5 Front HS control module  
 R13/1 Left front seat cushion heater element  
 R13/2 Left front backrest heater element  
 R13/3 Right front seat cushion heater element

R13/4 Right front backrest heater element  
 S51/1 Left front seat heater switch  
 S51/2 Right front seat heater switch  
 X30 Accessory equipment connector block

# 82-0805 Wiring diagrams seat heater with automatic shut-off

Vehicle ident end no. 388 215

Seat heater rear

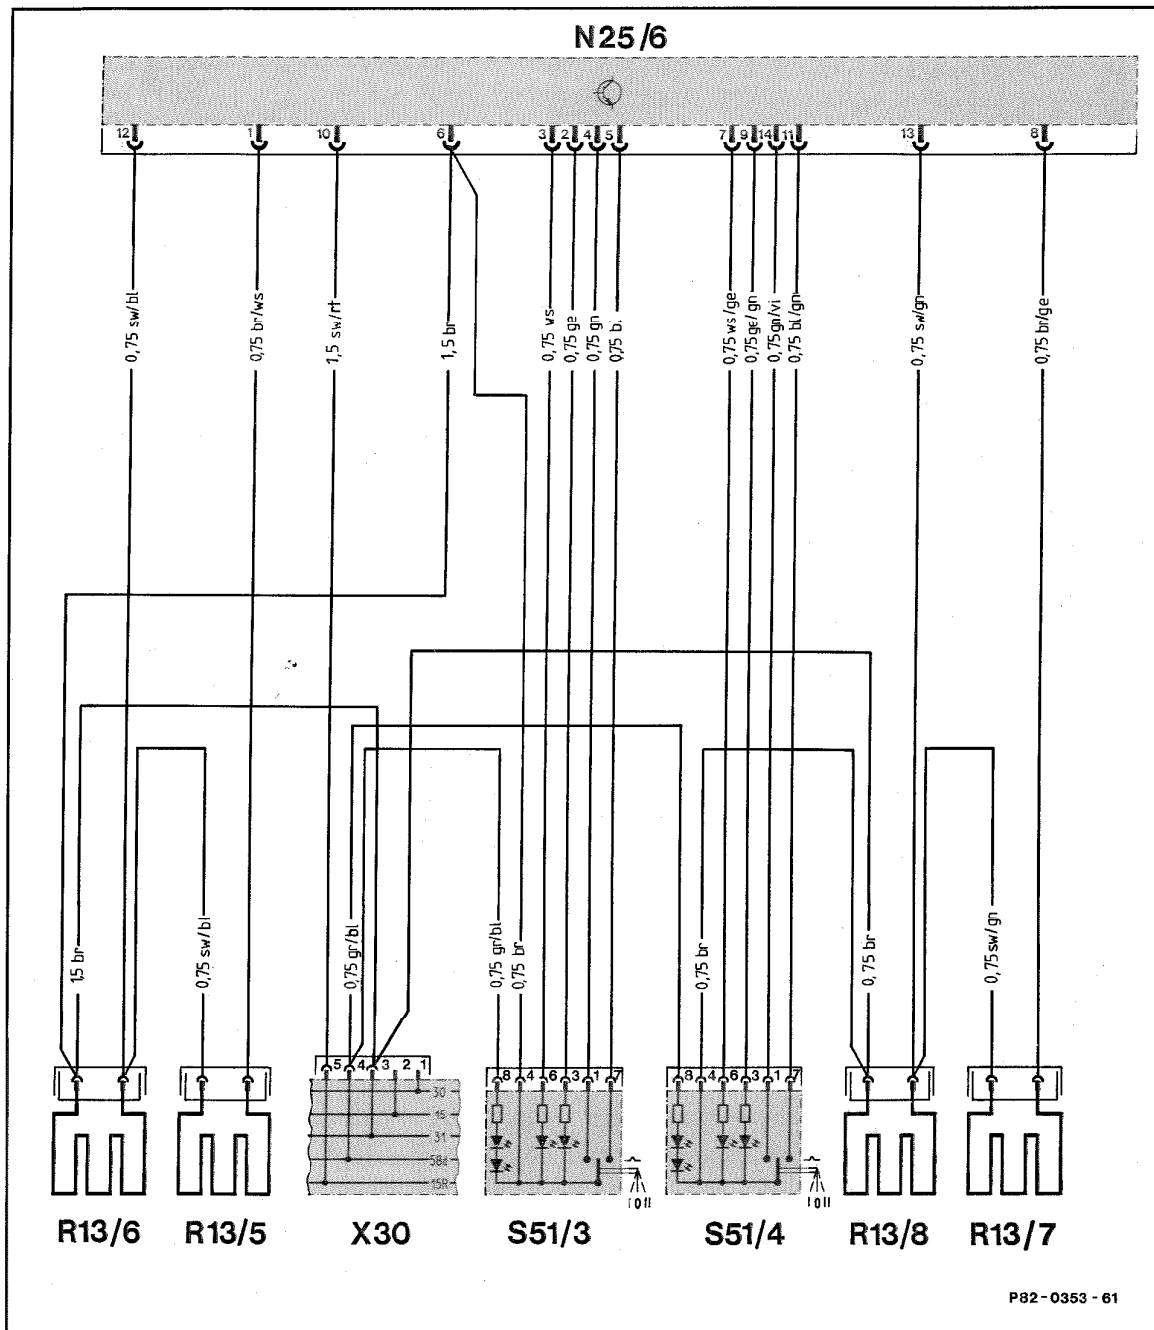

P82-0353-61

P82-0353-61

N25/6 Rear HS control module  
 R13/5 Left rear seat cushion heater element  
 R13/6 Left rear backrest heater element  
 R13/7 Right rear seat cushion heater element


R13/8 Right rear backrest heater element  
 S51/3 Left rear seat heater switch  
 S51/4 Right rear seat heater switch  
 X30 Accessory equipment connector block

# 82-0805 Wiring diagrams seat heater with automatic shut-off

C. Version as of 10/88

Vehicle ident end no. A 439 287

Seat heater for seats front left and front right

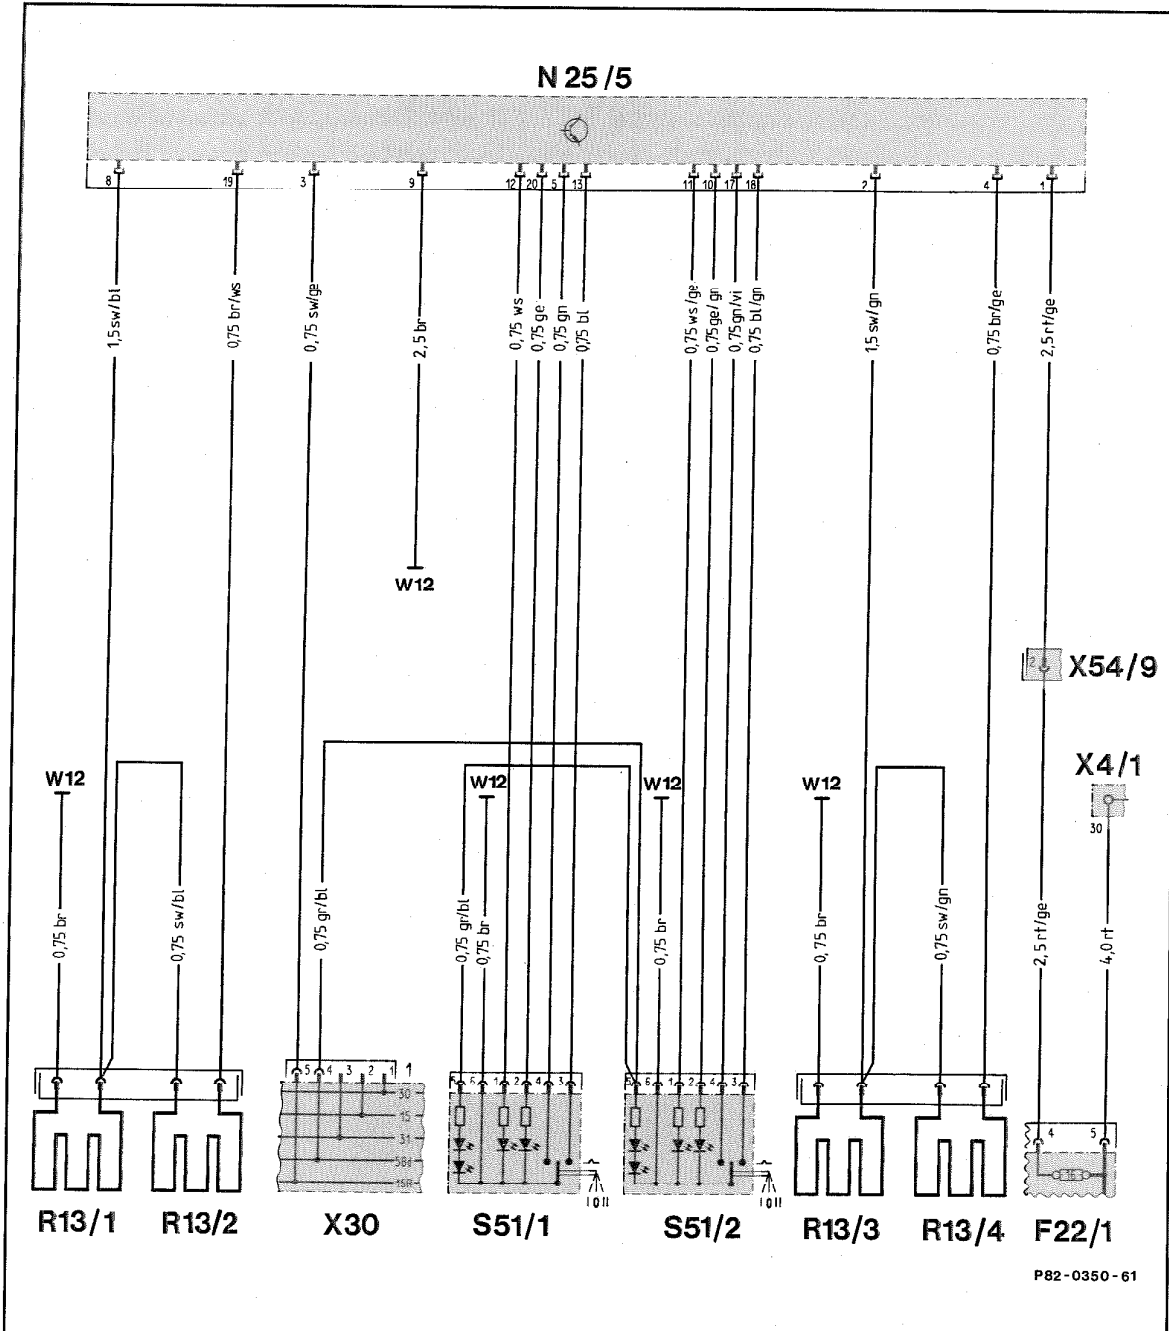

P82-0350-61

P82-0350-61


F22/1 Auxiliary fuse holder (trailer hitch/HS)  
 N25/5 Front HS control module  
 R13/1 Left front seat cushion heater element  
 R13/2 Left front backrest heater element  
 R13/3 Right front seat cushion heater element  
 R13/4 Right front backrest heater element

S51/1 Left front seat heater switch  
 S51/2 Right front seat heater switch  
 W12 Ground (center console)  
 X4/1 Terminal block (circuit 30, interior) (2-pole)  
 X30 Accessory equipment connector block  
 X54/9 Heated seats voltage supply connector (2-pole)

# 82-0805 Wiring diagrams seat heater with automatic shut-off

Vehicle ident end no. A 439 287

## Rear seat heater

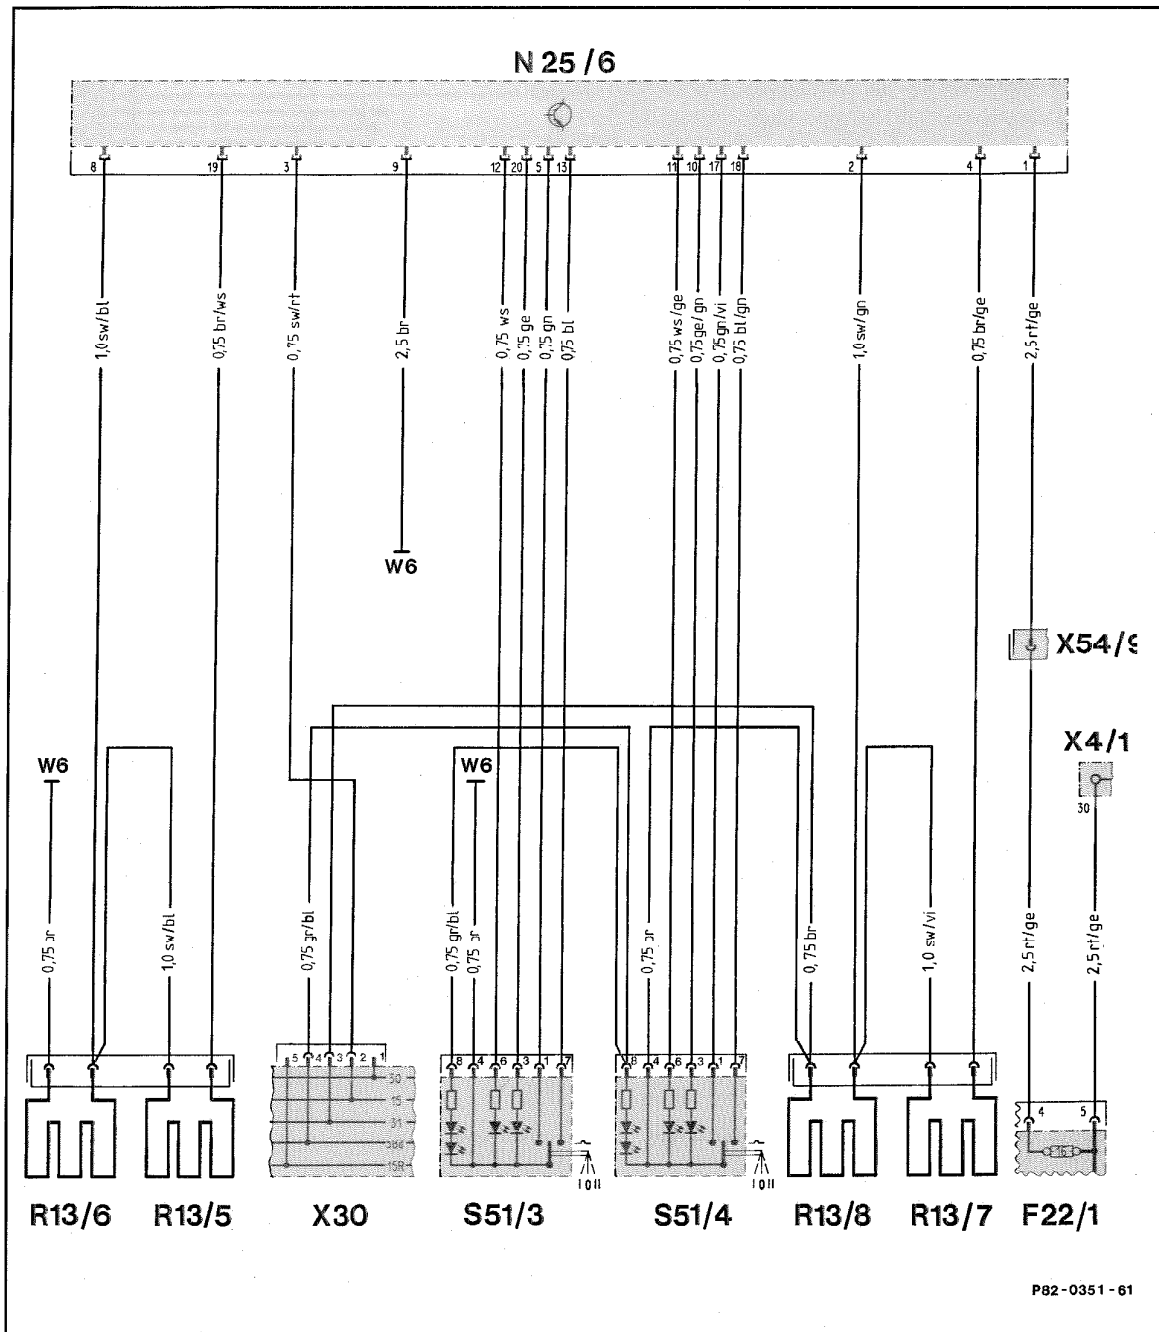

P82-0351-61

P82-0351-61

F22/1 Auxiliary fuse holder (trailer hitch/HS)  
 N25/6 Rear HS control module  
 R13/5 Left rear seat cushion heater element  
 R13/6 Left rear backrest heater element  
 R13/7 Right rear seat cushion heater element  
 R13/8 Right rear backrest heater element

S51/3 Left rear seat heater switch  
 S51/4 Right rear seat heater switch  
 W6 Ground (left wheelhousing in trunk)  
 X4/1 Terminal block (circuit 30, interior) (2-pole)  
 X30 Accessory equipment connector block  
 X54/9 Heated seats voltage supply connector (2-pole)