


88-200 R and R front bumper

Removal

- 1 Unscrew both fastening nuts left and right.
- 2 Pull out bumper in forward direction.

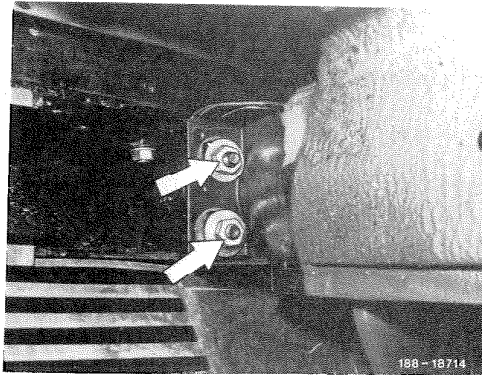

Installation

- 3 Introduce bumper into bracket left and right.
- 4 For further installation, proceed vice versa.

