


**Removal**


1 Move engine hood into 90° position and cover windshield at the left and right.

2 Pull-off hose on check valve and disconnect at holding clips.

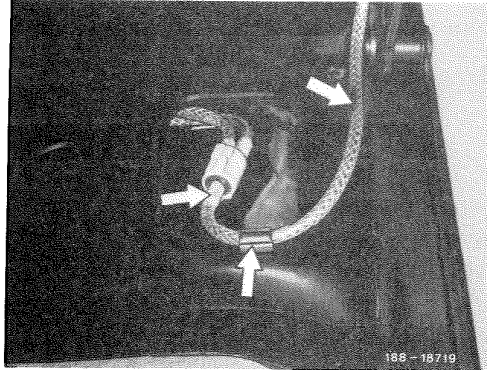


3 Pull out connecting cable for heatable windshield washer jets in engine hood bracing and separate plug connections.

4 Pull connecting cable from bracing on engine hood.

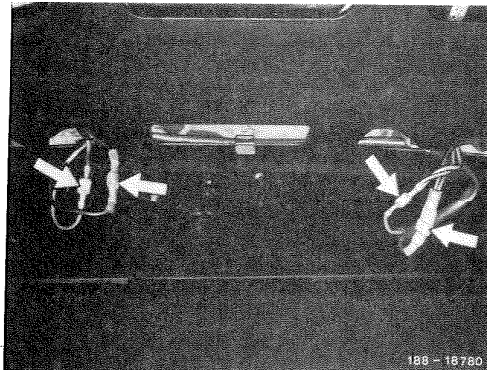

5 Disconnect cable on holding clip on engine hood.

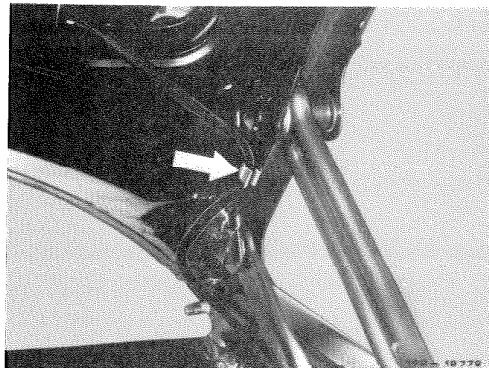


## 88-300 R and R hood

---

6 Push locks from bolts on engine hood hinge on both sides.


7 Knock out bolts and remove engine hood.

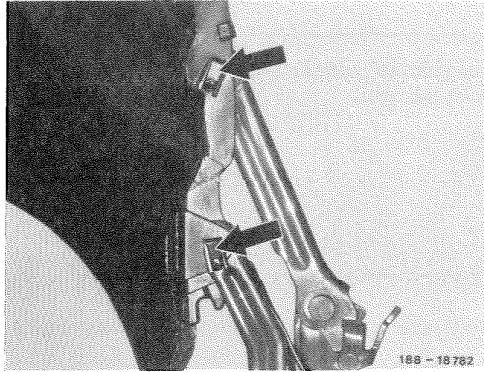

### Installation

---

**Note:** Prior to installation, make sure that the plastic bushings are inserted into bearings.

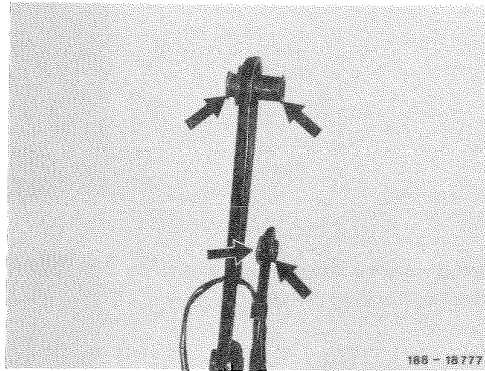

8 Position engine hood and insert bolts, making sure that the lug on bolt enters recess on engine hood.

9 For further installation proceed vice versa.

**Note:** Perform adjusting jobs according to 88-302.

