



Removal

- 1 Remove engine hood (88-300).
- 2 Mark position of engine hood hinge at wheel house in engine compartment.
- 3 Remove inner fender.
- 4 Remove vacuum supply tank at the left.
- 5 Disconnect spring on engine hood hinge.

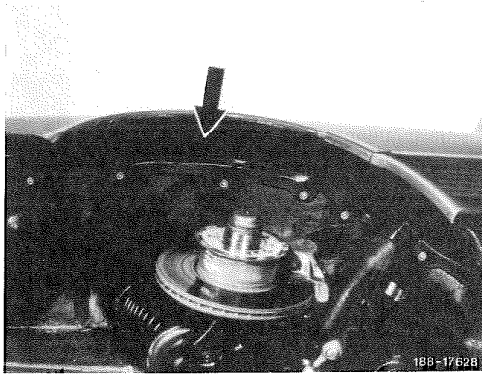

- 6 Unscrew nuts on engine hood hinge in wheel house.
- 7 Remove engine hood hinge.

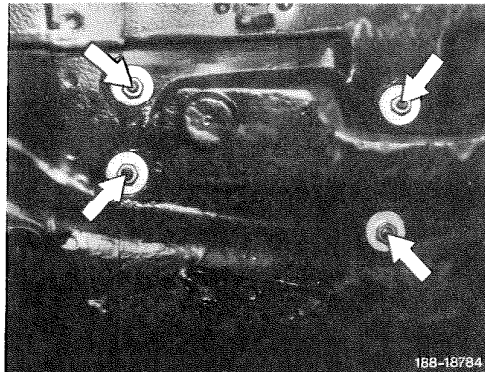

Installation

- 8 Position engine hood hinge in relation to mark on wheel house and tighten.
- 9 For further installation proceed vice versa.