

## 88-310 R and R hood release cable


---

### Removal


---

1 Remove cover under instrument panel at the left (68-150).


2 Turn adjusting screw on engine hood cable control to the right to relax hood cable control.

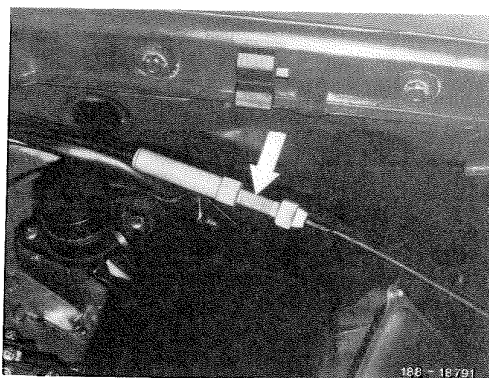

3 Unscrew screws on handle.

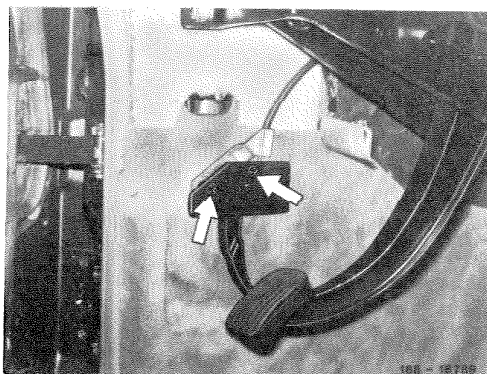


4 Disconnect hood cable control on handle.

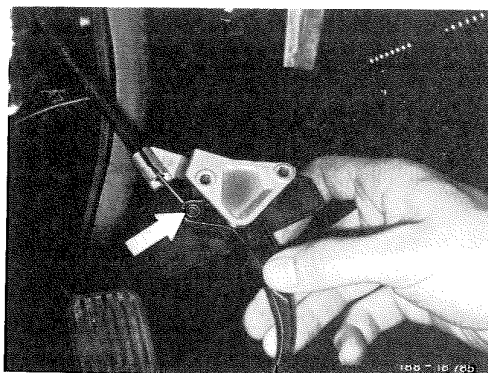


## 88-310 R and R hood release cable

---


5 Disconnect hood cable control on engine hood lock right.

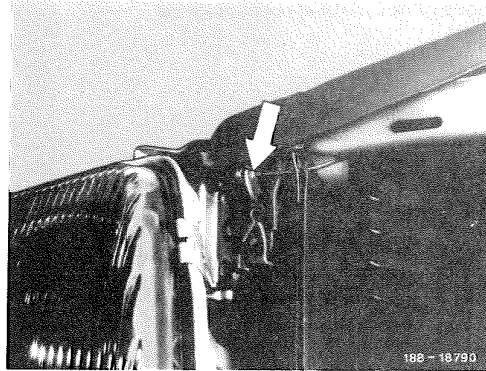


6 Push off the 5 holding clips on stiffening panel.

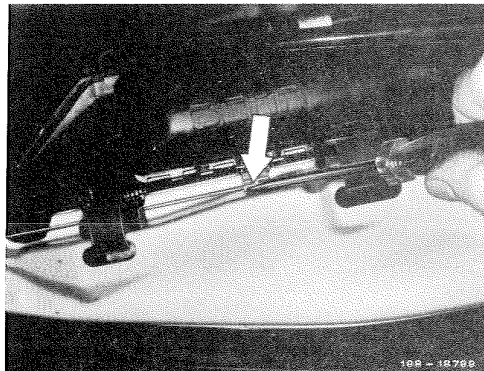

7 Unscrew screws at lefthand light unit top and pull lamp unit slightly forward.

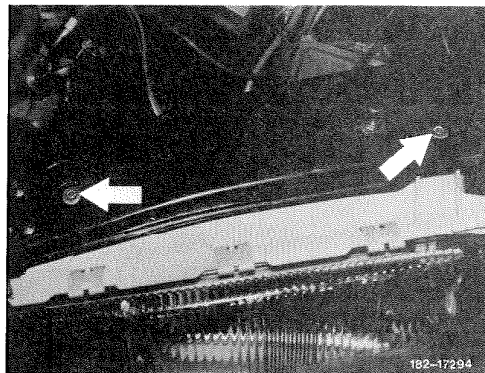


8 Disconnect engine hood cable control on engine hood lock left.

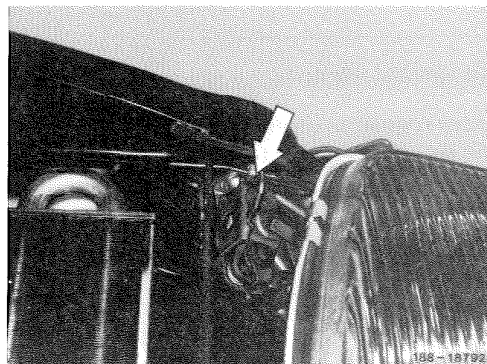


## 88-310 R and R hood release cable

---

- 9 Disconnect hood cable control at counterbearing of engine hood lock.

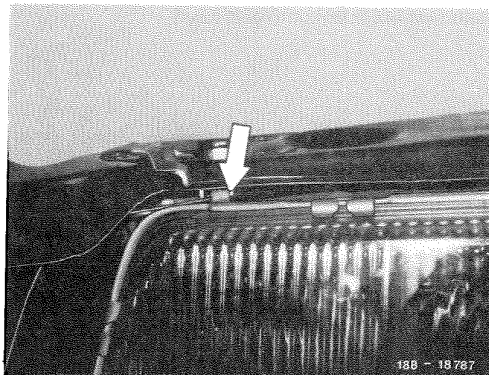


- 10 Loosen fastening strap on cable harness.

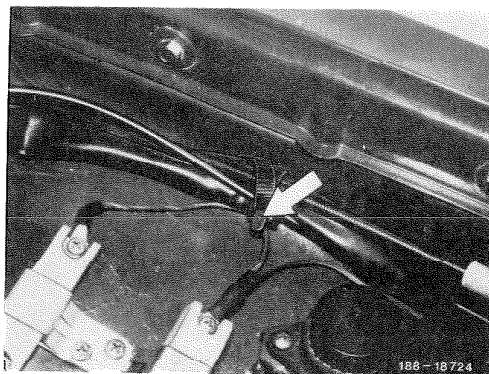

- 11 Loosen fastening strap on fuse box.

- 12 Remove hood cable control in forward direction.

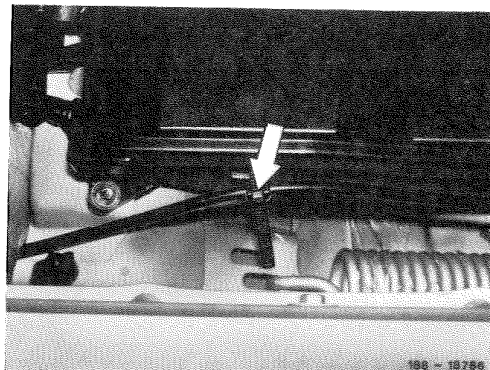

### Installation

---

- 13 For installation proceed vice versa.
- 14 Adjust hood cable control on adjusting screw in such a manner that the engine hood can be efficiently opened.

**Note:** Adjust (aim) headlamp following installation.