


## 88-400 R and R radiator cowl

---

### Removal

---

- 1 Unscrew the 10 fastening screws and remove radiator cowl.

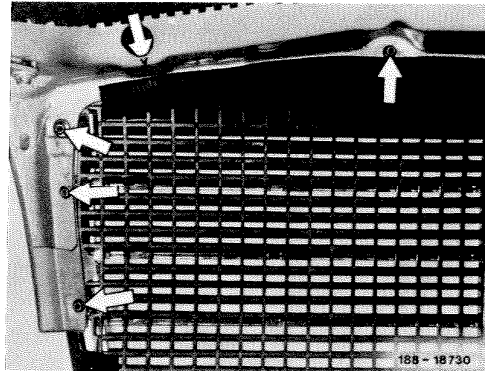

### Installation

---

**Note:** Prior to installing radiator cowl, make sure that the shim is glued to engine hood.

- 2 For installation proceed vice versa.