


88-401 R and R radiator grille

Removal


1 Remove radiator cowling (88-400).

2 Unscrew rubber buffer at the left and right and push off plug pin underneath.

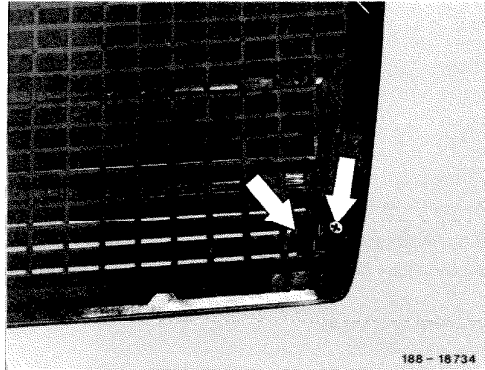


3 Push off plug pins left and right.

Attention!
Plug pins are preloaded.

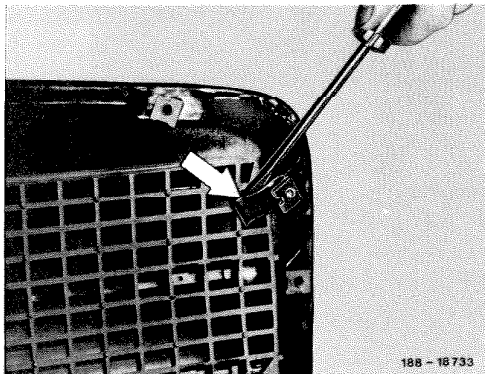


4 Unscrew screw at bottom of radiator cowling.

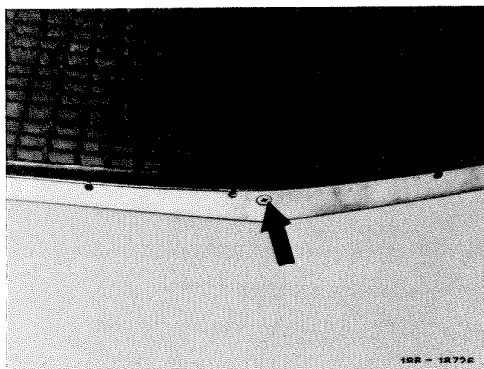

88-401 R and R radiator grille

5 Unscrew nut at top on radiator cowling and remove company emblem.

6 Remove grille.

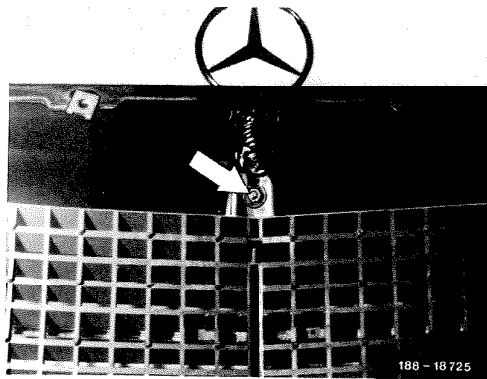

Installation

7 For installation proceed vice versa.