



Removal

1 Turn fastening bolts for lamp carriers to the left, remove lamp carriers left and right and put aside in trunk.

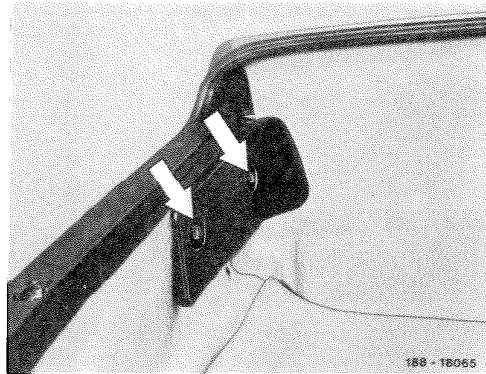


2 Unclip cover at front of rear center section, remove toward the rear and put aside in trunk.

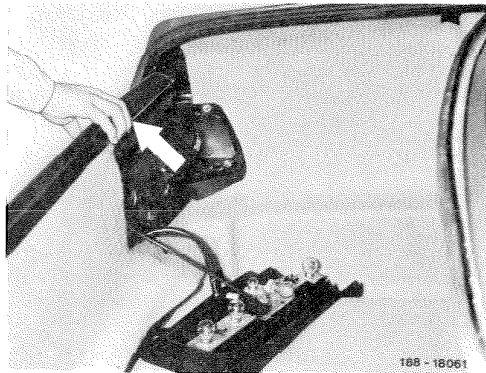

3 Unscrew fastening nuts for snap lock and housing for licence plate lamp.


4 Pull out sealing rubber in range of housing for licence plate lamp.

5 Pull out snap lock with housing for licence plate lamp toward the rear (snap lock should be in "open" position).

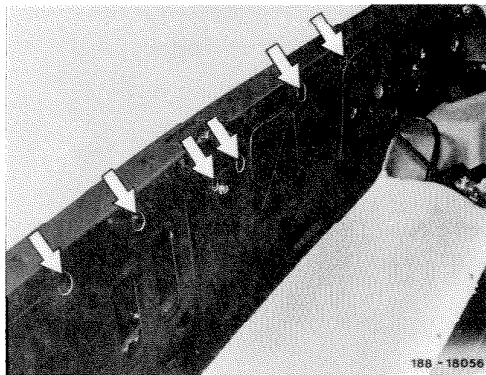


88-502 R and R trunk lid lock

6 Remove cover of assembly hole on rear center section.

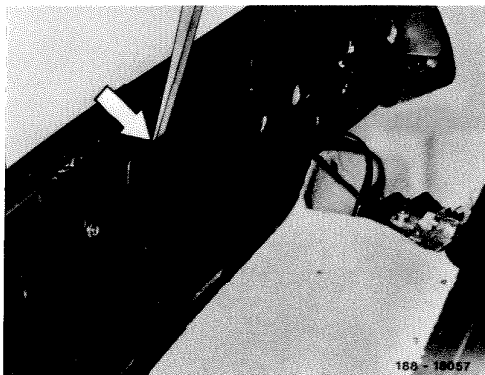

7 Unscrew fastening screw for trunk lid lock and remove trunk lid lock through assembly hole.

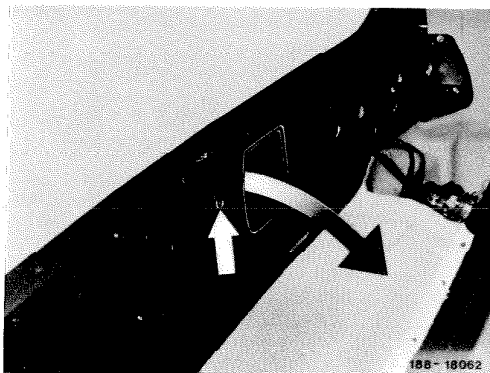

Installation

8 For installation proceed vice versa.