


88-512 R and R trunk lid hinge lever

Removal

- 1 Remove hat rack (68-458).
- 2 Remove cover in trunk (68-480).
- 3 Unscrew screws inside rear pillar.

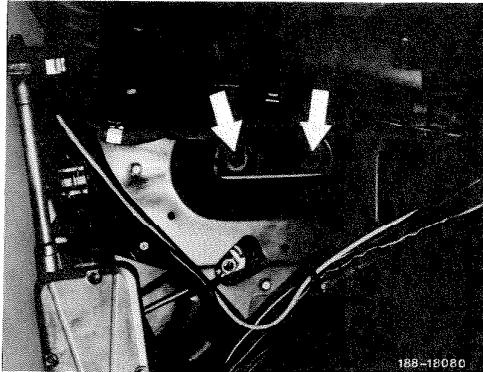

- 4 Unscrew nut on rear wall top, while removing damping in this range for this purpose.
- 5 Remove hinge lever upwards through trunk.



Installation

- 6 For installation proceed vice versa.