

## 88-860 R and R rain strip

---

### A. Sedan

#### Removal

---

- 1 Unscrew screws on front wall pillar, roof frame and rear pillar.
- 2 Remove rain strip together with seals.

#### Installation

---

For installation proceed vice versa.

**Note:** Drill fastening holes for rain strips into spare part roof frame.

- 1 Glue plastic discs, part No. 108 990 01 40, as spacing shims to rear of rain strip in range of bores.
- 2 Fit rain strip with seals to roof frame, mark holes and drill to 2.2 mm dia.
- 3 Remove chips with magnet and protect edges of holes against corrosion by means of zinc dust paint.
- 4 Insert new dowels into existing slots and attach rain strip with screws, part No. 007 983 002 205.
- 5 Preserve screw heads with wax.





B. Coupe

Removal

- 1 Open rear side window and driver's door.
- 2 Unglue trimstrip outside on rear side window and pull sealing frame out of holding rail starting at the rear.

**Note:** Sealing frame is attached to front end by means of clips and glue.


- 3 Unscrew screws on holding rail and remove holding rail.

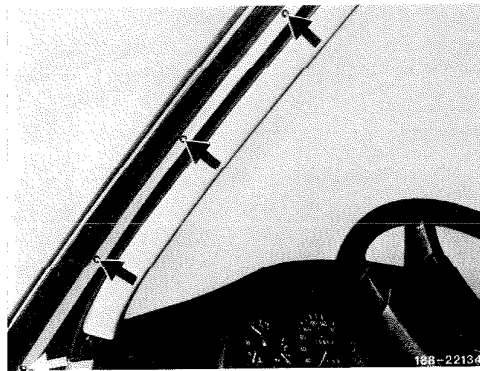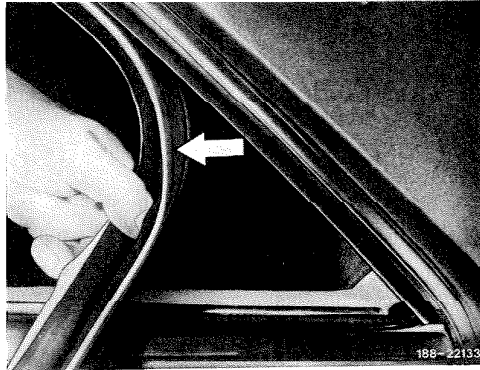


- 4 Unscrew rain strip and remove.

Installation

- 5 Apply glass sealing compound at contact surface between rain strip and body, and insert sealing rubber at front and rear.

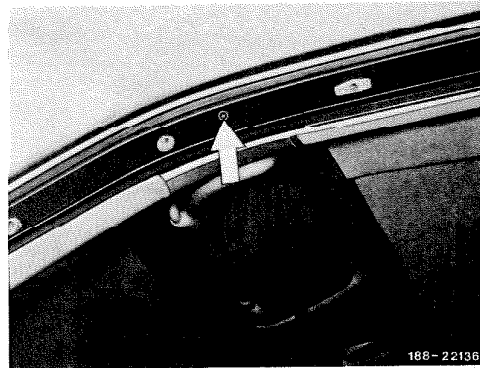

- 6 Screw-on rain strip.

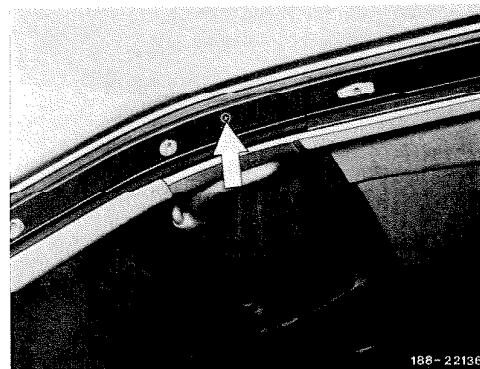


## 88-860 R and R rain strip

---


7 Screw-on holding rail.

**Note:** Pay attention to perfect seat of supporting layer between holding rail and rain strip.

8 For easier assembly of sealing frame, coat holding rail with soap water.

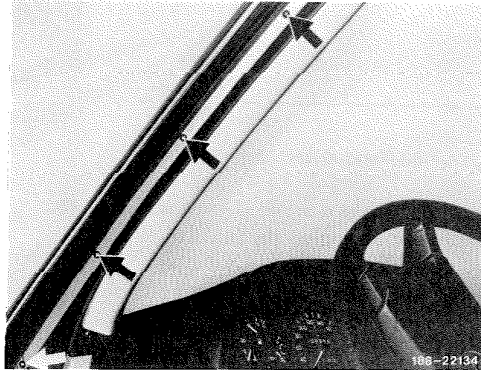

9 Coat sealing frame and body in front range with MB-universal glue.

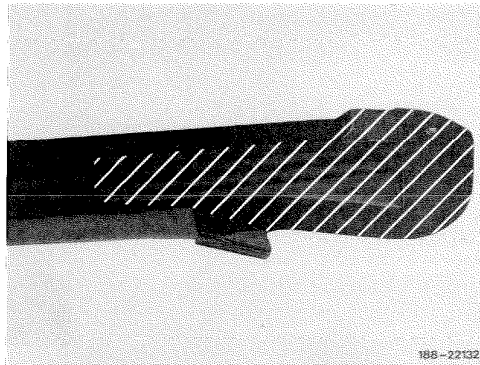

10 Insert rear butt joint of sealing frame to center of 7th screw from the rear, then force sealing frame into holding rail at first to the rear, then to the front by means of a suitable plastic wedge.

11 Push clip at front end of sealing frame into bore and apply pressure against sealing frame in range of glue.

**Note:** Adapt rain strip and holding rail to spare part roof frame and drill fastening holes.

12 Insert new dowels for holding rail at the rear.

13 Adapt rain strip and drill holes.

14 Remove drilling chips with magnet and protect edges of holes against corrosion by means of zinc dust paint.

15 Screw-on rain strip.

16 Adapt holding rail, drill holes and fasten holding rail.

17 Preserve screws with wax.

