


### Note

If the outside rear view mirror is unintentionally changing its position, tighten screw on adjusting mechanism as required.


**Note:** Screw is located under cover plate.

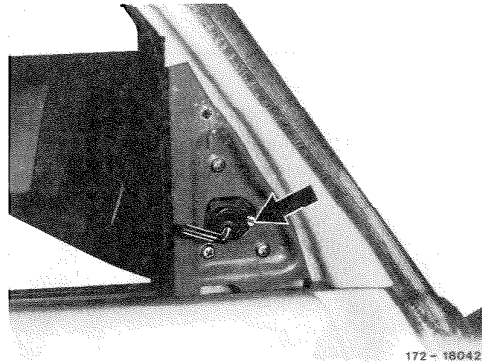


### A. Mirror glass

#### Removal

1 Push outside rear view mirror to the rear and disengage both ends of holding spring.

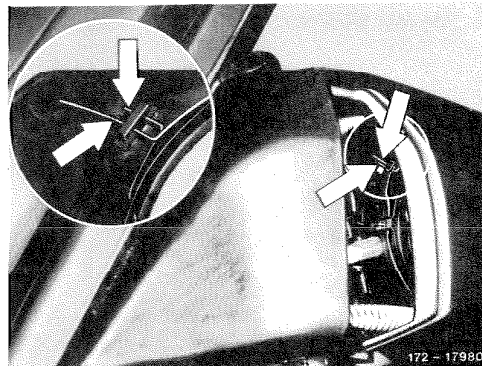

2 Push out mirror glass by means of a plastic wedge and remove laterally.

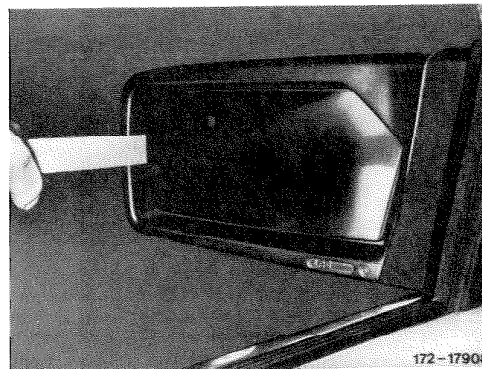


## 88-900 R and R outside rear view mirror

---

### Installation

---

- 3 Attach holding spring on mirror glass.
- 4 Attach mirror glass to adjusting lever and push on mounting disc until holding spring is audibly engaging.

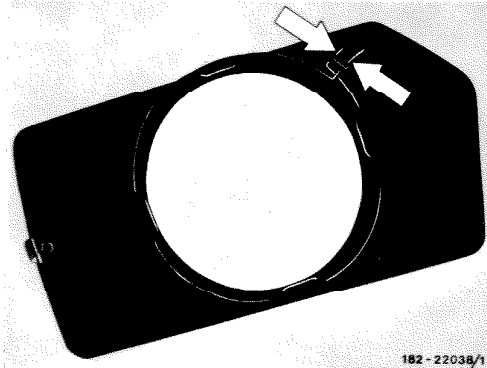


### B. Complete outside rear view mirror


### Removal

---

- 1 Push plastic lock out of handle by means of a screwdriver.

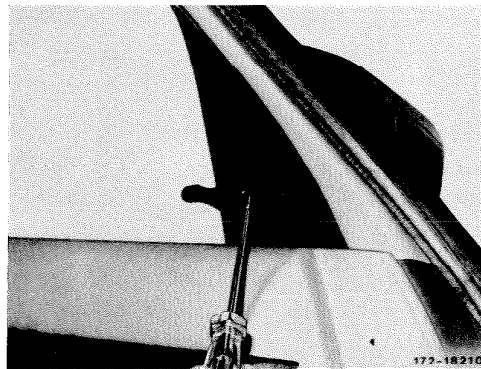

- 2 Unclip cover plate at top from door frame, pull in upward direction and disengage on door lining.

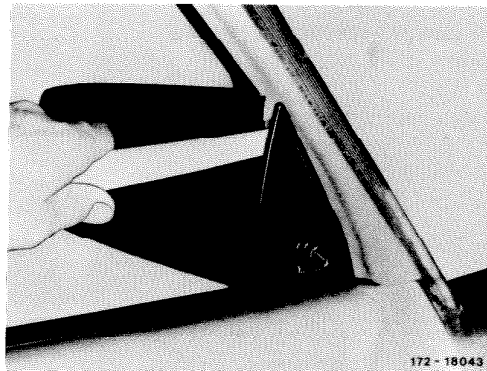

- 3 Unscrew screws and remove mirror.

### Installation

---

- 4 For installation proceed vice versa.

