



Removal

- 1 Completely remove legroom cover right (righthand steering left).
- 2 Remove blower cover below.
- 3 Remove connecting hoses from air jet nozzle.
- 4 Loosen Phillips head screw from holder for air jet nozzle (small ratchet without adaptor with Phillips head top).
- 5 Move out air jet nozzle (47).
- 6 Unclip air jet nozzle and check seat of nozzle (arrow) and mount correctly, if required.
- 7 Provide sealing surfaces with glue and clip both parts together.

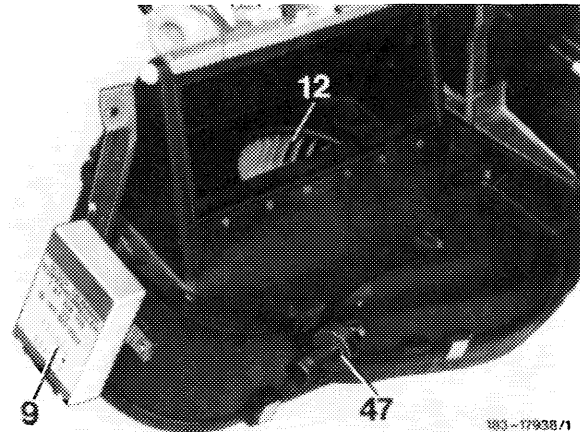


- 8 For installation proceed vice versa, paying attention to installing connecting hoses free of kinks and accurate plugging of hoses on nozzle connections.
- 9 Check function of heating system or automatic climate control.

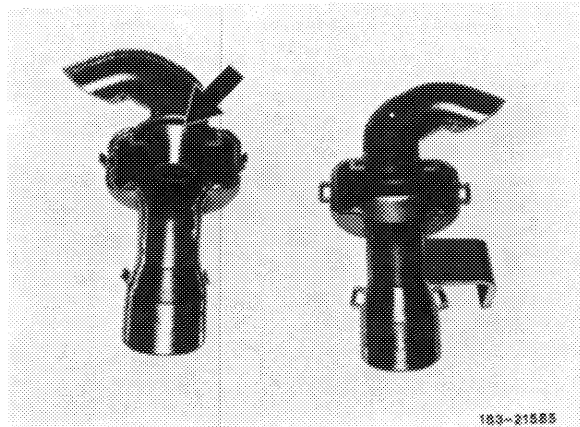

Air jet nozzle (arrow) functional

Attention!

Prior to assembly of legroom cover, remove glove box for accurate connection of air duct transitions.

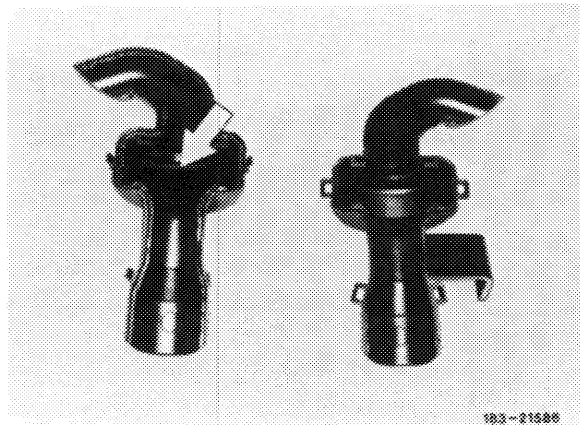

Air jet nozzle (arrow) not functional