

### Data

---


Resistance at room temperature 15 °C	15,7 kΩ ± 0,5 kΩ
25 °C	10 kΩ ± 0,5 kΩ
35 °C	6,5 kΩ ± 0,5 kΩ
operating temperature 80 °C	1,5 kΩ ± 0,5 kΩ

---


### Removal

---

- 1 Remove radio.
- 2 Remove ashtray.
- 3 Disconnect 2-pole coupling from temperature sensor (6 or 7).

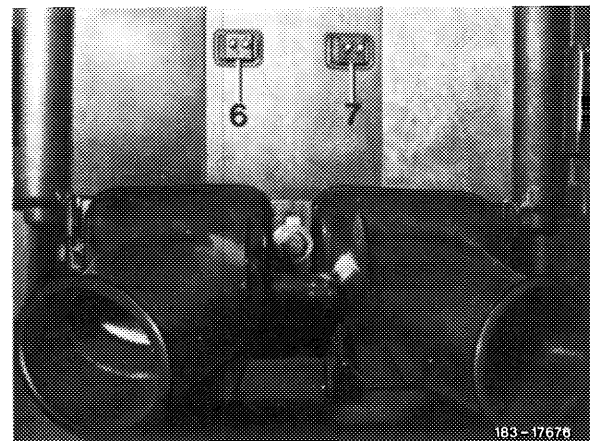

- 4 Remove temperature sensor (6 or 7) from heater unit.

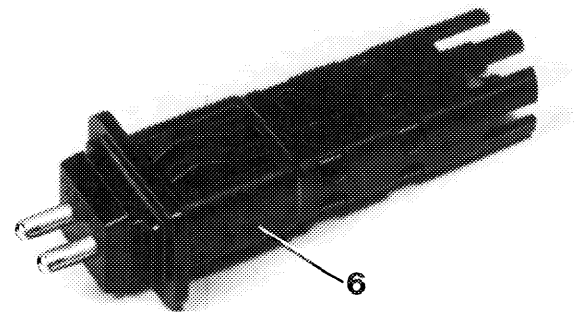

### Installation

---

- 5 Test temperature sensor (6 or 7) with ohmmeter.
- 6 Insert temperature sensor (6 or 7) in heater unit and connect 2-pole coupling.
- 7 Install radio.
- 8 Install ashtray.
- 9 Check function of automatic heating system

