


### Removal

---

1 Remove cover at the right on lefthand steering vehicle; for righthand steering cover at the left below instrument panel (68–150).

2 Unscrew electronic switching unit (9) from blower housing and disconnect electric coupling.

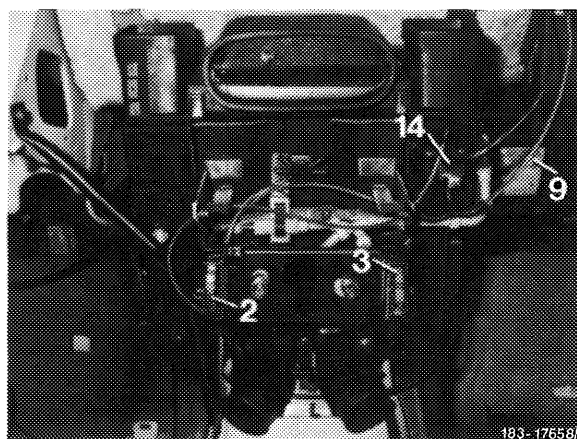

### Installation

---

3 Connect electric coupling to electronic switching unit (9) and screw switching unit onto blower housing.

4 Install cover on the right below instrument panel (68–150).

5 Check function of automatic heating system.

