


Operation

The thermo valve is installed in water return line. At outside temperatures below +15 °C, the valve is slowly and automatically opened. It will be completely opened at +4 °C and below.


Removal

- 1 Remove cover on air intake (83-140).
- 2 Loosen hose clamps on thermo valve and pull off hoses.

Note: Prior to pulling-off hoses, place a rag under connections on thermo valve to catch emerging coolant.

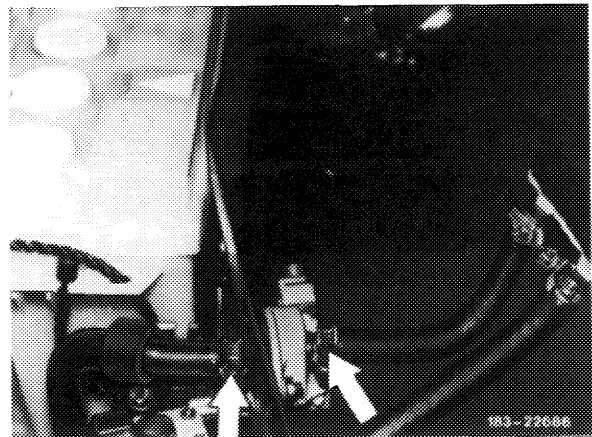

- 3 Unscrew nut (arrow) and remove thermo valve.

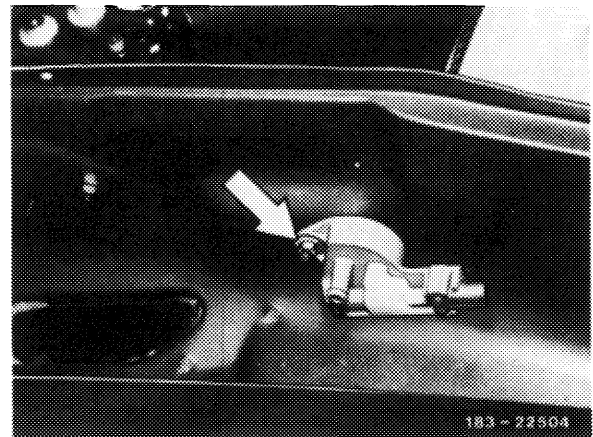

Installation

- 4 For installation proceed vice versa.

Note: During installation, pay attention to perfect seat of sealing ring on water outlet connection!