


83-163 Removal and installation of vacuum reservoir

Removal

- 1 Remove bulkhead on left below front fender.
- 2 Remove screws (97) and take out vacuum reservoir downward.
- 3 Detach vacuum lines (see arrow).

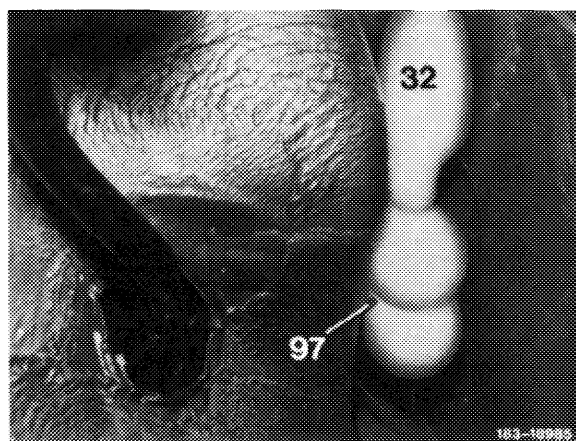

Installation

For installation proceed vice-versa.