

Data

Cutout temperature °C



0 ± 1

Note

Changing adjustment of ETR-switch in direction of “colder” is not permitted. In the event of trouble or if the cutout point is not correctly set, always replace switch.

Removal

- 1 Remove lefthand cover under instrument panel (68–150).
- 2 Unscrew screw (refer to arrow) on lefthand lining of center console.
- 3 Pull electric flat plug and unscrew screws at right and left from ETR-switch (29).

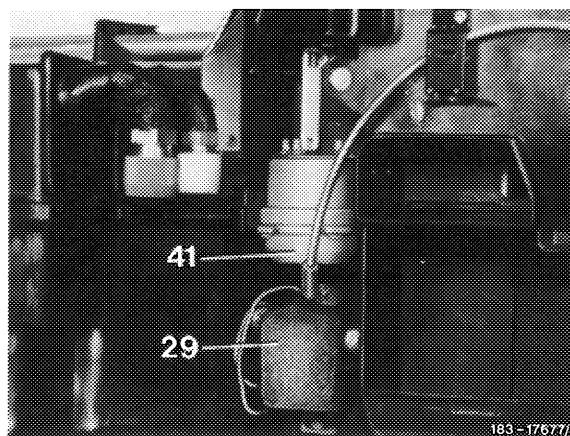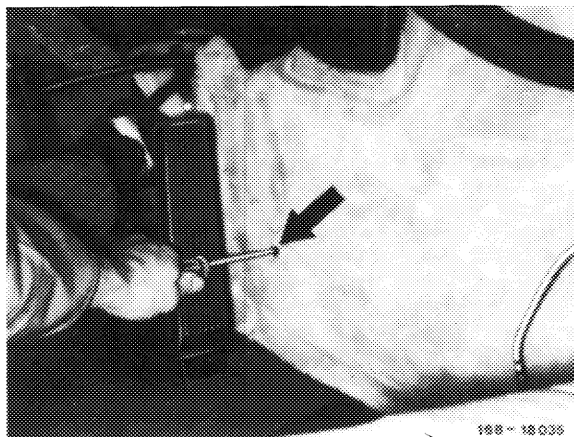


4 Carefully pull ETR-switch (29) toward the rear and then pull capillary of ETR-switch out of guide tube in air conditioner housing, making sure that a counterhold is applied to guide tube.

Installation


5 Slip capillary of ETR-switch up to red mark into guide tube in air conditioner housing.

6 Screw ETR-switch (29) to air conditioner housing by means of 2 screws.

7 Mount electric flap plug.

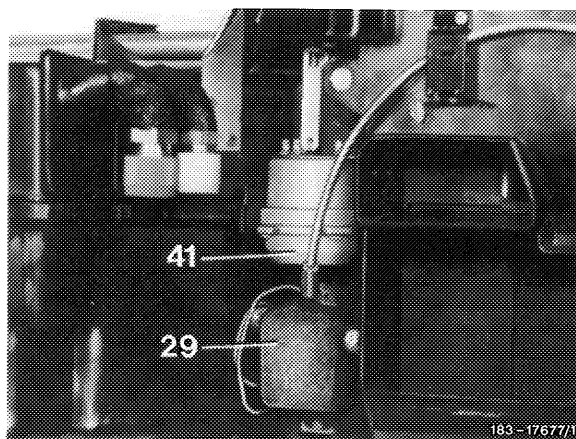

8 Attach lefthand lining of center console by means of screw (refer to arrow).

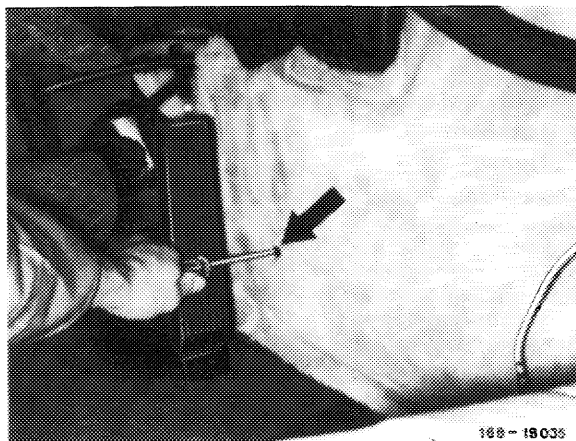

9 Install lefthand cover under instrument panel (68-150).

10 Check automatic climate control for function (83-607).