


### Removal

---


- 1 Remove cover at the right under instrument panel (68–150).
- 2 Remove glove box (68–140).
- 3 Unscrew electronic switchgear (19) on blower housing and pull off electric plug.

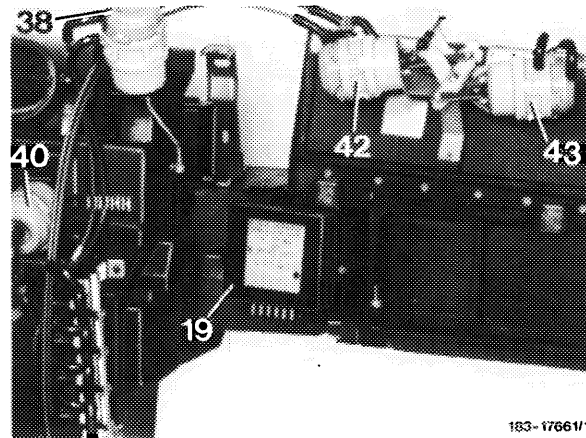

### Installation

---

- 4 Plug electric plug to electronic switchgear (19) and screw switchgear to blower housing.

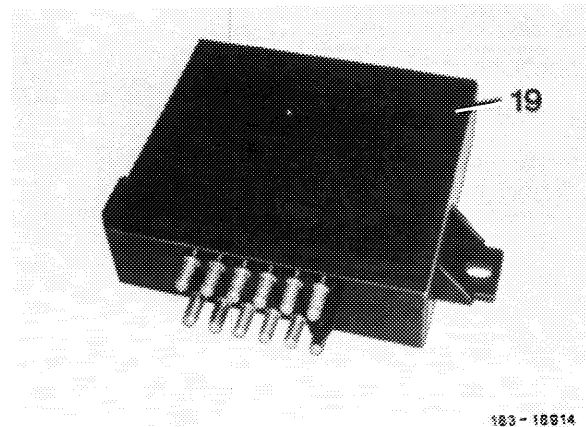

- 5 Install cover at the right under instrument panel (68–150).
- 6 Install glove box (68–140).
- 7 Check automatic climate control for function