

07.3—281 Renewing holder for fuel pump, fuel filter and fuel reservoir


For renewing holder,
remove
fuel reservoir (07.3—270),
fuel filter (07.3—275),
fuel pump (07.3—280).

Note

The holder has been modified to improve installation position and to increase rigidity.

Model 107

A Former version
B Present version

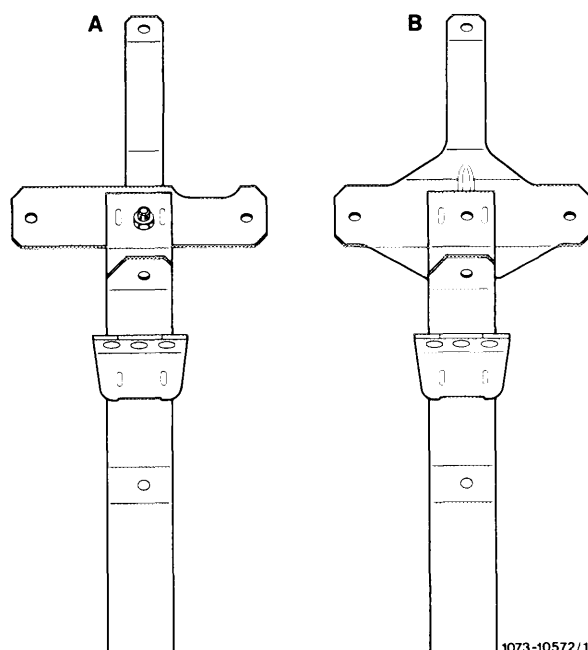

Shape of fuel line between pump, filter and reservoir
has also been modified on model 126.

Start of series: November 1981.

Model 126

A Former version
B Present version

