

15—510 Removal and installation of ignition distributor


Job No. of flat rates or standard texts and flat rates data 15—130.

Note

Rotate crankshaft at central bolt at front (socket wrench element 27 mm) in engine direction of rotation only.

Removal

- 1 Remove distributor cap, cable plug connections and vacuum lines.
- 2 Set engine on ignition TDC of 1st cylinder. Make sure that the markings on distributor rotor and on distributor housing are in alignment.
- 3 Needle on timing housing cover should also be above TDC mark of vibration damper.

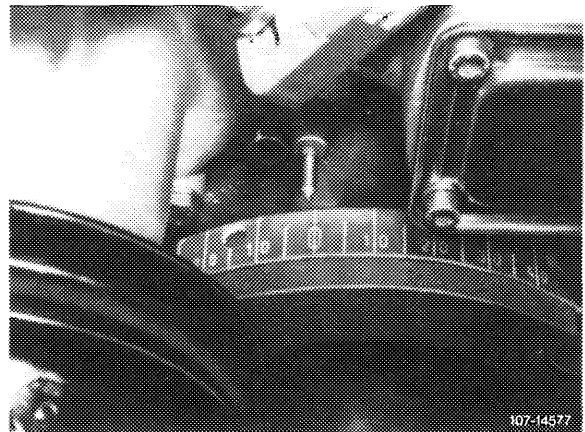

- 4 Unscrew ignition distributor fastening and remove ignition distributor.

Installation

- 5 For installation proceed vice versa. Pay special attention to ignition TDC of 1st cylinder and to markings on distributor housing and vibration damper.
- 6 Adjust ignition timing (15—501).

