


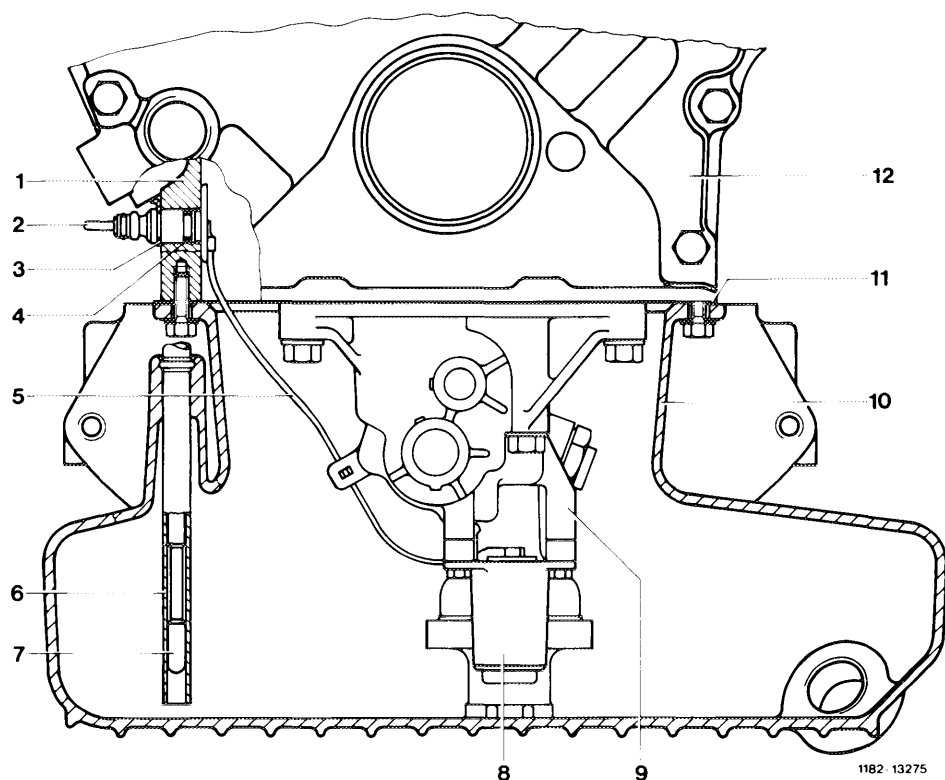

- | | |
|---------------------------|-------------------------|
| 1 Crankcase | 7 Oil dipstick |
| 2 Connection plug | 8 Oil level transmitter |
| 3 Locking ring | 9 Oil pump |
| 4 Sealing ring | 10 Oil pan |
| 5 Connection cable | 11 Oil pan gasket |
| 6 Oil dipstick guide tube | 12 Timing case cover |

Note

The oil level transmitter (8) is bolted to the oil pump (9). The connection plug (2) of the connection cable (5) passes through a bore in the crankcase (1) from inside to the outside and is sealed with a sealing ring (4). On the outside the connection plug is attached with a locking ring (3).

Model 107 Remove oil level transmitter with connection cable and connection plug with oil pan removed (01-310).

Model 126 Remove oil level transmitter with connection cable and connection plug with oil pan lower part removed.

