
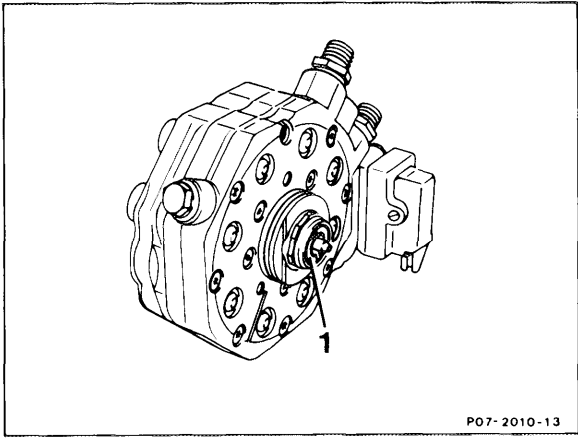


07.3-207 Renewing sealing ring for control piston

Preceding operation:
Renewing fuel distributor (07.3-205)

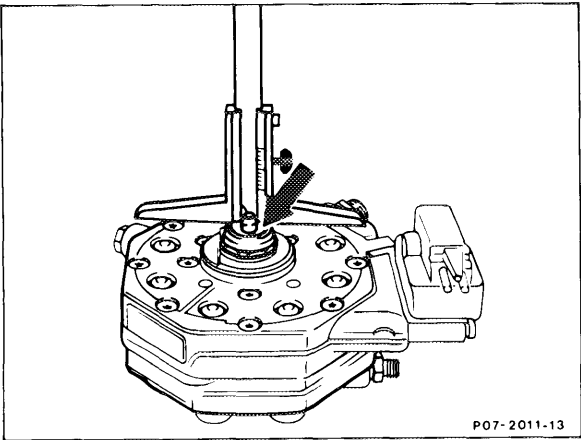

- | | |
|--------------------------------------|--|
| Position (arrow) of screw plug | measure with depth gauge and note. Mark position with scriber to be sure. |
| Screw plug (1) | remove with special tool. |
| Sealing ring of screw plug | renew, ensure proper seat of sealing ring. |
| Screw plug (1) | screw in until the distance measured prior to removal is obtained. |
| |  |
| | Failure to do so will result in the control piston assuming a wrong basic position. |
| Idle speed | adjust |

Special tool

