


⚠ CAUTION!

Remove and install electronic ASD control module (N30/2) only with ignition switched off. Failure to observe can result in damage to the control module from voltage or current peaks.

Removal, installation


- 1 Pull off ASD control module (N30/2), plug in.

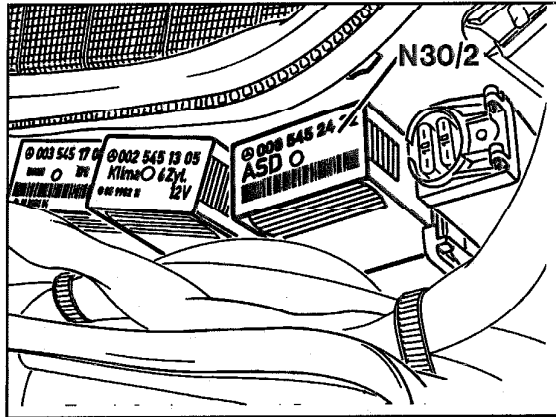

P35-2349-13

Installation note

When installing pay attention to the arresting pins and proper seating (arrows).

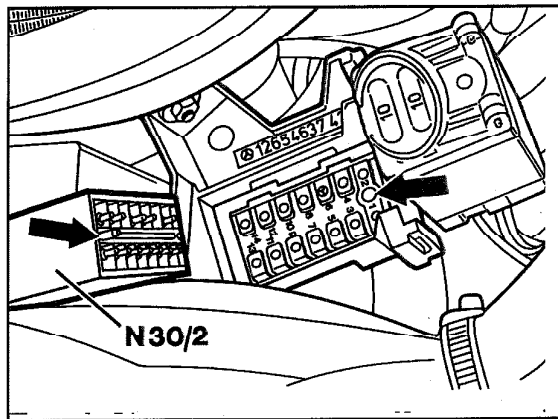

P35-2344-13