


35-513 R and R ASD solenoid valve

Note

The ASD solenoid valve (Y38) can be exchanged without removing the hydraulic unit.

⚠ WARNING!

Release pressure in hydraulic system. Screw out pressure release screw approx. 1/2 turn (arrow, see 35-511).

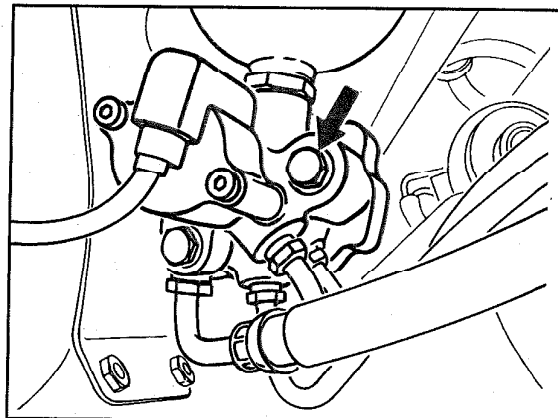


P35-2351-13

Removal, installation

- 1 Disconnect plug connector for ASD solenoid valve (Y38x1) in spare tire well.

Installation note

Pay attention to proper line position and good seat for rubber sleeve.

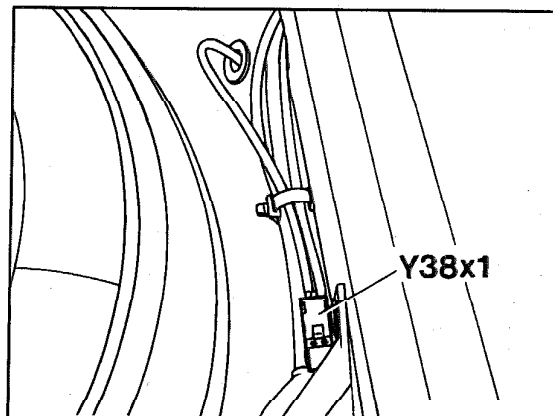


P35-2260-13

- 2 Screw out Allen screw (Y38a), screw in.


Installation note

Tightening torque 2.5 Nm.

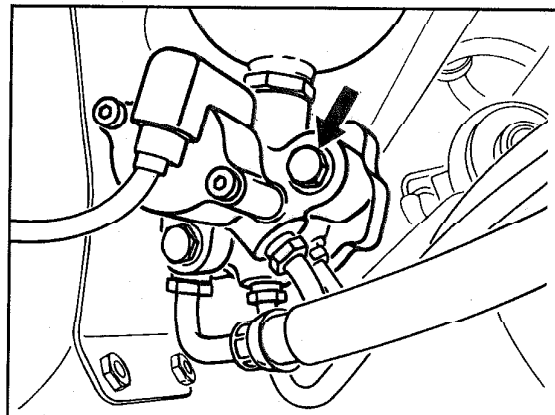

P35-2351-13

- 3 Pull ASD valve (Y38) out of reservoir charging valve (3), insert.

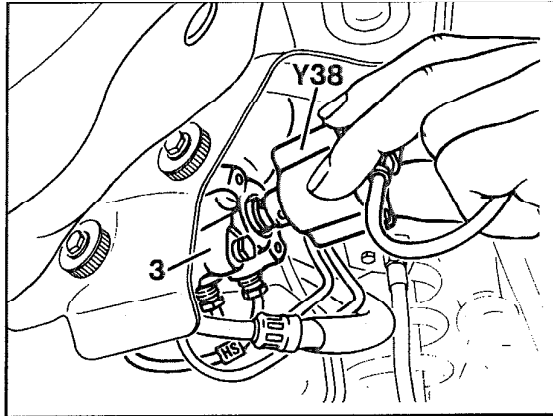

P35-2350-13


Installation note

Clean sealing surface on reservoir charging valve and solenoid valve.

When inserting the solenoid valve into the reservoir charging valve assure that the O-rings are not damaged (arrows).

Note

The solenoid valves are shipped without plugs. Plugs must be soldered onto exchange solenoid valves and the length of the lines must correspond with the length of the lines removed.

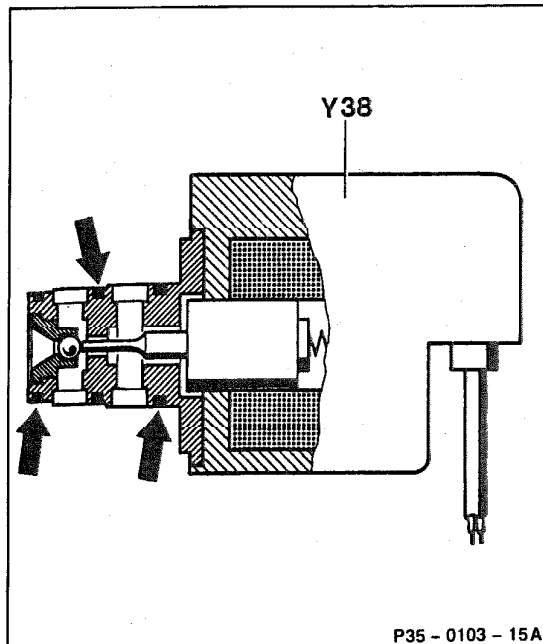

P35 - 0103 - 15A

P35-0103-15A

- 4 Reinstall in opposite order.
- 5 Check oil level in oil tank, correct if required.