


35-519 Bleeding ASD hydraulic system

Note

After replacing rear axle differential housing, working on ring cylinder or on hydraulic unit, the hydraulic system must be bled.

- 1 Disconnect electronic ASD control unit (N30/2), connect (35-512).

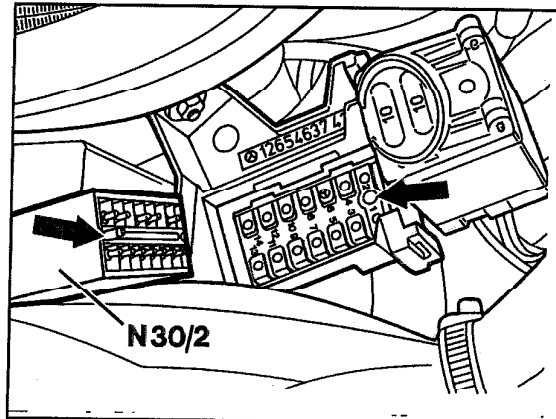


P35-2344-13

- 2 Bridge sockets 8 and 10 on coupling for ASD control unit.

For this purpose use lines with 2.5 mm and 4.0 mm dia. plugs from electrical connection set 201 589 00 99 00.

Note

When sockets are bridged, the solenoid valve opens when the ignition is switched on.

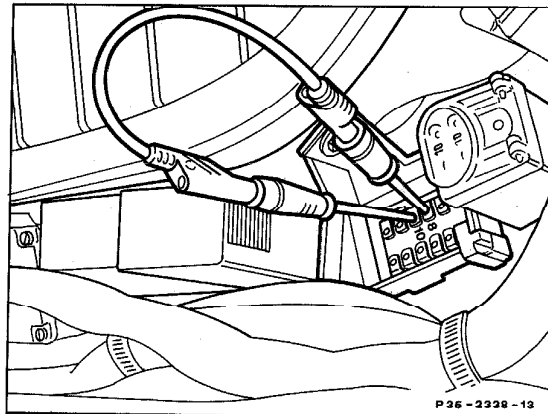


P35-2338-13

- 3 Start engine and allow to idle.
- 4 Remove rubber cap (67a), install.
- 5 Open bleed fitting, close.

⚠ CAUTION!

Bleed hydraulic system with bleed fitting (67) on right ring cylinder until oil exiting no longer contains bubbles.


Arrangement of bleed fitting, 1st version, right side, vertical top

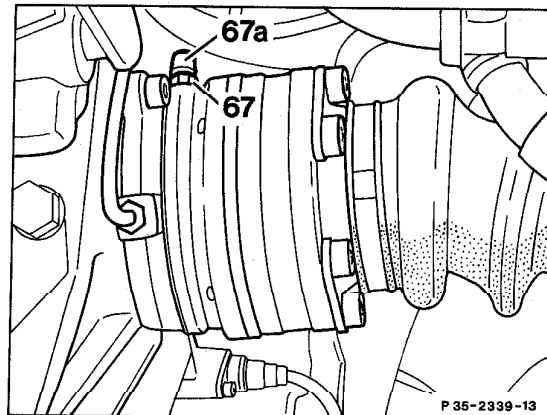

P 35-2339-13

P35-2339-13

35-519 Bleeding ASD hydraulic system

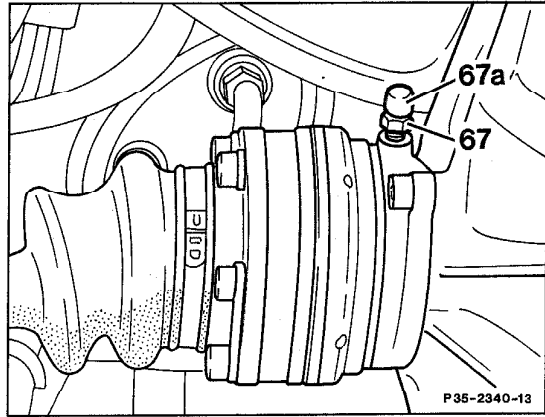

Arrangement of bleed fitting, 2nd version,
right side, horizontal center

P35-2340-13