



## 54-180 Installation of separate fuse for blower motor (through 06/86)

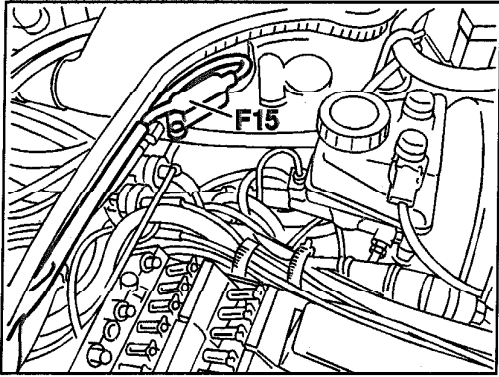

P54-6626-13.

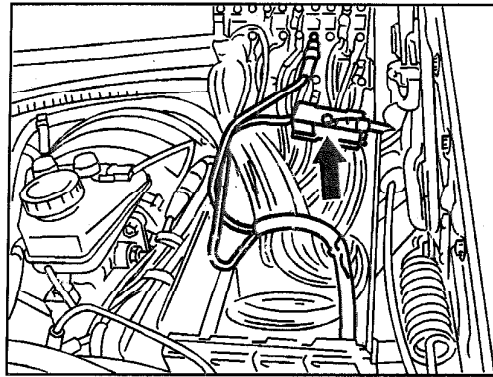

P54-6627-13

Ground lead on battery . . . . .	disconnect.
Holder for auxiliary fuse box (F 15) . . . . .	screw onto dividing wall in left component compartment.
Auxiliary wire with fuse box (F 15) . . . . .	fasten to mount.
Fuse carrier . . . . .	remove (54-160).
Auxiliary wire . . . . .	route along present wires and insert through grommet into fuse and relay box (F 1).
Wire (pink/green) . . . . .	connect to input, fuse 16, with terminal from auxiliary wiring harness.
Wire (black/green) . . . . .	disconnect from output, fuse 16, and connect with auxiliary wire to single-pin terminal block (arrow).
Terminal block (arrow) . . . . .	fasten to wire bundle in fuse and relay box (F 1).
Fuse carrier . . . . .	install (54-160).
Ground lead . . . . .	connect to battery.
Fuse insert strips . . . . .	replace.
Function check . . . . .	perform.

## 54-180 Installation of separate fuse for blower motor (through 06/86)

---

### Parts

Quantity	Designation	Part no.
1	Auxiliary wiring harness with fuse box	126 540 30 13
1	Mount	126 540 47 73
1	Terminal block	000 540 08 69
1	Cable strap	001 997 42 90
2	Sheet metal screws 4.2 x 13	007981 004244
1	Fuse insert strip (USA) and French	126 545 20 00
1	Fuse insert strip, German and English	126 545 21 00
2	Screws	007985 004123
2	Lock washers	912004 004102