



67-415 R and R rear side glass power window motor

Removal

- 1 Remove rear side window (67-400).
- 2 Disconnect battery.
- 3 Separate electric connections from window opener motor on cable connector.

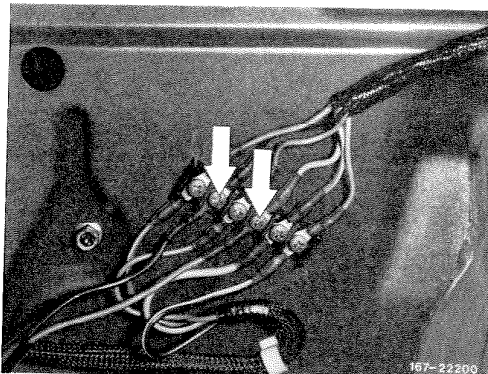


- 4 Unscrew cover on assembly opening and insert connecting cable of window opener motor through opening in rear side window.

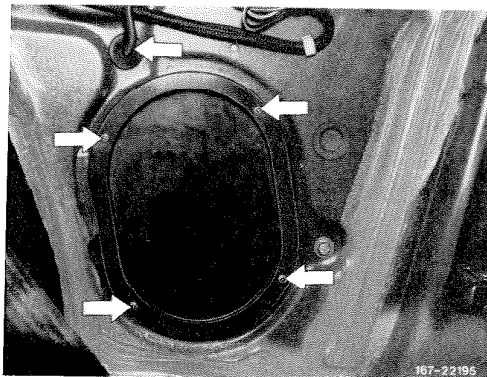

- 5 Unscrew the two screws and the nut on window opener.

- 6 Unscrew threaded bolt of window opener on rear side wall and completely remove window opener in upward direction.

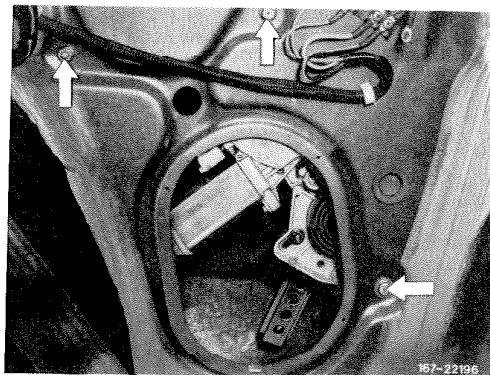

67-415 R and R rear side glass power window motor

Installation

7 For installation proceed vice versa.

Note: Adjust rear side window prior to assembly of side wall lining (67-420).