


68-456 R and R rear side panels


Removal

1 Remove rear seat cushion and rear seat backrest (91-170).


2 Unscrew chrome molding on center pillar.

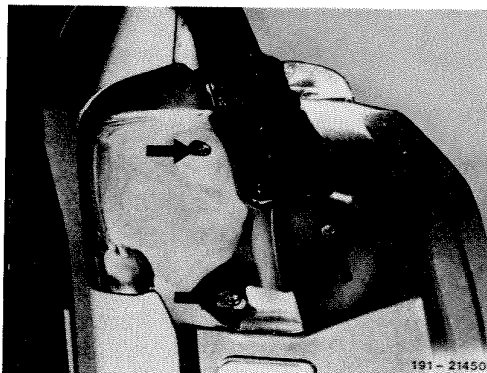


3 Pull off guide bracket on belt positioner.

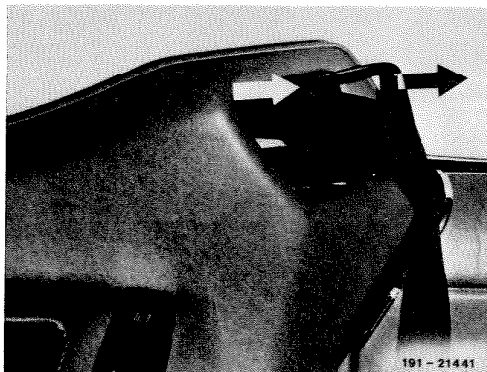


4 Unclip entrance rail in rear range and pull out protective edge strip.

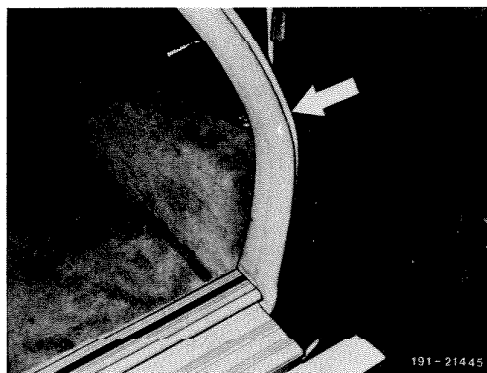


5 Push out plug on hand grip (arrow) and remove screw located behind.

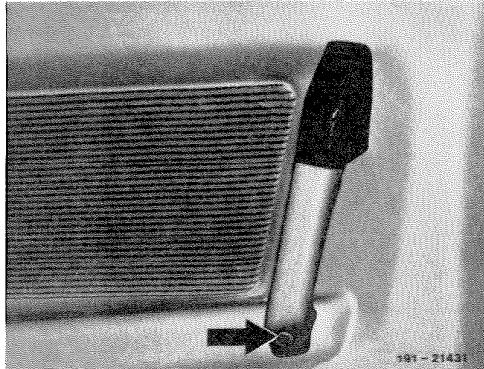


6 Push out switch for side window.

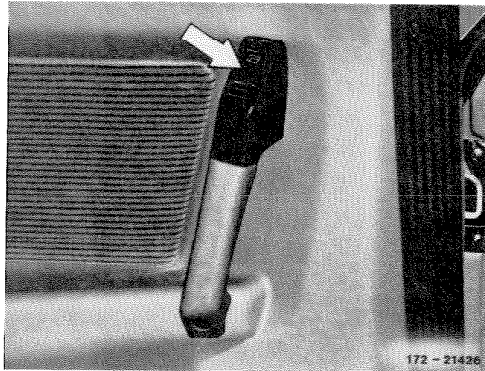

7 Unscrew fastening screw for cap from above.

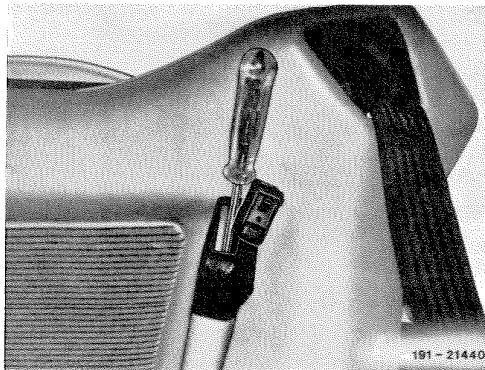


8 Pull cap horizontally from hand grip.

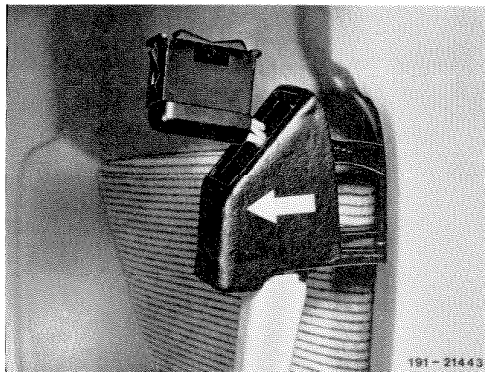


68-456 R and R rear side panels

9 Unscrew upper screw and remove handle.

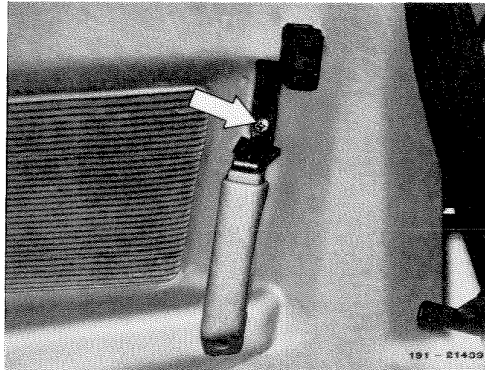

10 Unscrew lower screw on side wall lining.

11 Pull out side wall lining in upward direction.

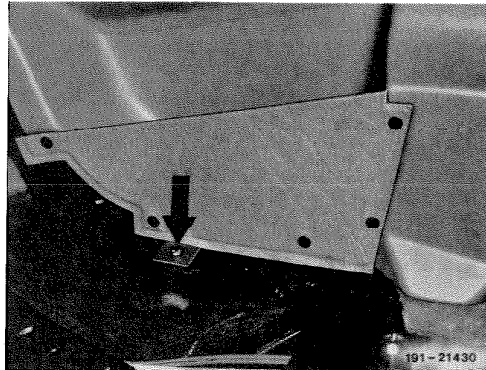

Installation

12 For installation proceed vice versa.