


Removal


1 Remove paneling on rear pillar (68-449).

Note: Do not unscrew safety belt on side member.

2 Unscrew fastening nut for hat rack from direction of trunk.

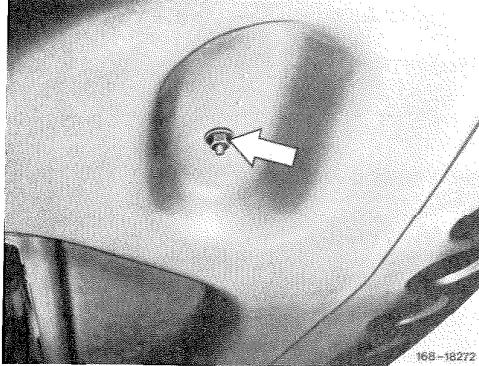

3 Lift hat rack above fastening plates of rear seat backrest (arrows) and pull out in forward direction.

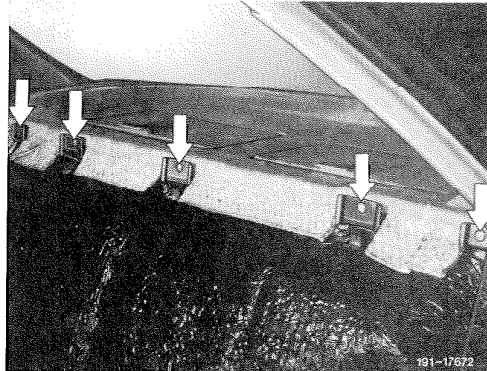

Installation

4 Introduce hat rack, making sure that rack is inserted under plate at the rear left and right.

5 For further installation proceed vice versa.

