


## 72-100 R and R front door inner trim panel

---


### Removal

---

- 1 Remove hand grip with arm rest (72-140).
- 2 Remove window crank (72-110).
- 3 Unscrew screw and pull-off reveal molding in upward direction.

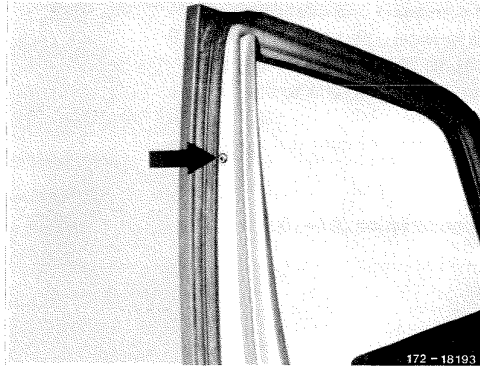


- 4 Remove enclosure on door lock.

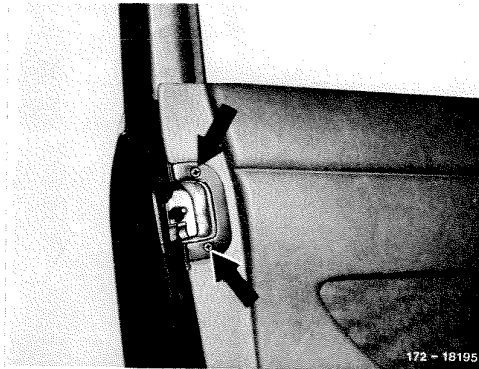

- 5 Unscrew screw below on door lining.
- 6 Pull door lining in upward direction and remove.

### Attention!

Door lining is hung-on and not clipped-on.

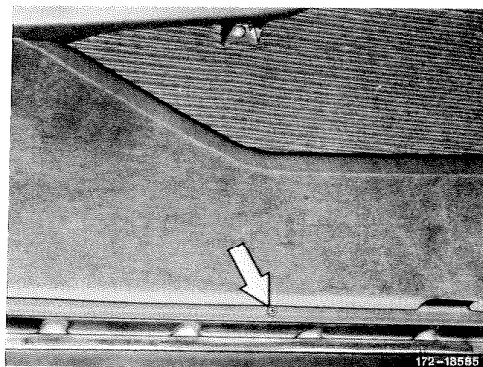

## 72-100 R and R front door inner trim panel

---

### Installation

---

7 For installation proceed vice versa.


**Note:** If the sealing sheet on inner door panel is damaged, renew prior to installing door lining (part no. 126 727 00 87).

### B. Coupe


### Removal

---

1 Unscrew cover molding at lock side and enclosure on door lock.

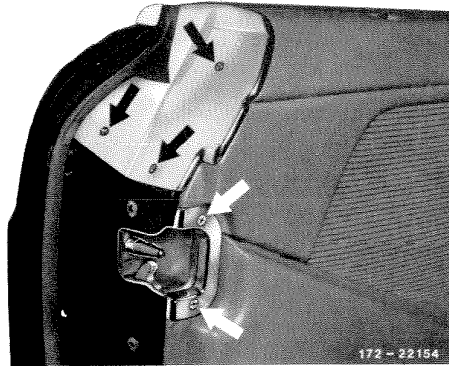

2 Pull off control knobs for electric seat adjustment.

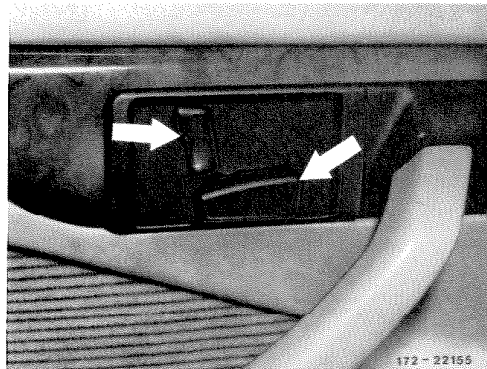


3 Remove screw on cover of electric seat adjusting switch.




## 72-100 R and R front door inner trim panel

---


- 4 Force-off cover of electric seat adjusting switch.

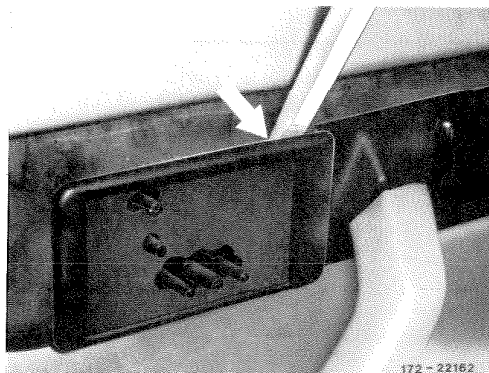


- 5 Disconnect insert on recess for handle and remove.

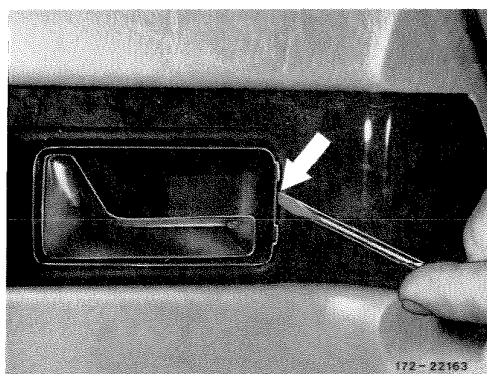

- 6 Remove screw on recess for handle.

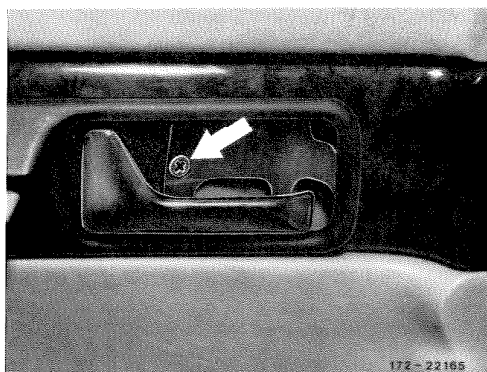

- 7 Pull out cover and unscrew fastening screw for arm rest underneath.

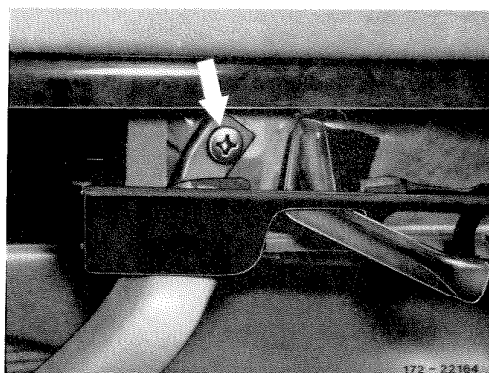


## 72-100 R and R front door inner trim panel

---

- 8 Unscrew both screws below on arm rest.
- 9 Push arm rest toward the rear and remove.
- 10 Pull door lining in upward direction and separate.

**Attention!**

When separating door lining, make sure that the switch cam of the switch for electric seat adjustment is not damaged.

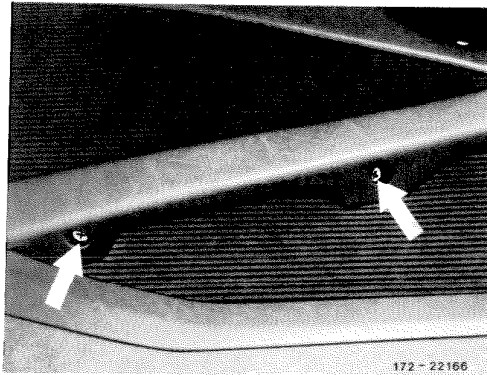

### Installation

---

- 11 For installation proceed vice versa.

**Note:** If the sealing sheet on inside door panel is damaged, remove sheet prior to installing door lining (part no. 126 727 02 87).