


72-160 R and R inner sealing strip

Removal

1 Remove door lining (72-100 or 72-101).

2 Push sealing strip out of inner door panel in upward direction.

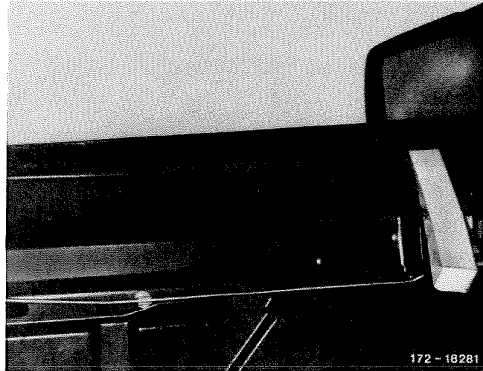

Installation

3 For installation proceed vice versa.