

72-170 R and R outer sealing strip


Removal

- 1 Remove outside rear view mirror (88-905).
- 2 Remove trimstrip on door ledge with a plastic wedge.
- 3 Force outer sealing strip out of plug-in channel with a plastic wedge and remove.


Note

Since December 1981 a modified sealing strip with plug-in clips is mounted on window shaft of the doors. The ledge flange of the doors has been simultaneously changed.

- A Former sealing strip (profile)
B Modified sealing strip (profile)

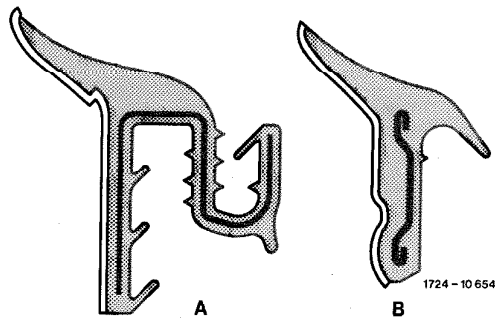

Note: The modified sealing strip can also be mounted on doors with the former ledge strip. For this purpose, the sealing strip is also fastened with plug-in clips.

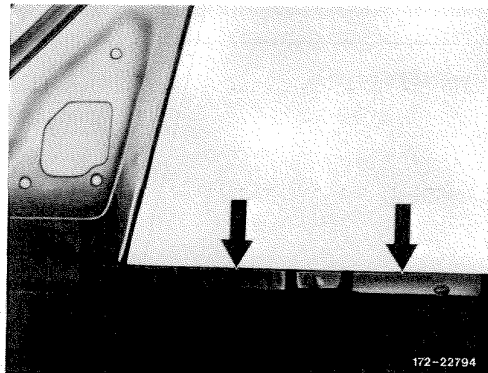

The sealing strip installed up to now cannot be used on doors with the modified ledge flange.

Installation

For installation proceed vice versa.

