


## 72-187 R and R rear door power window mechanism

---


### Removal

---


- 1 Let crank window down.
- 2 Remove door lining (72-101) and pull sealing sheet from inner door panel.
- 3 Remove cover on plug coupling and remove the two cables from window opener motor.
- 4 Unclip cable from window opener motor on inner door panel.

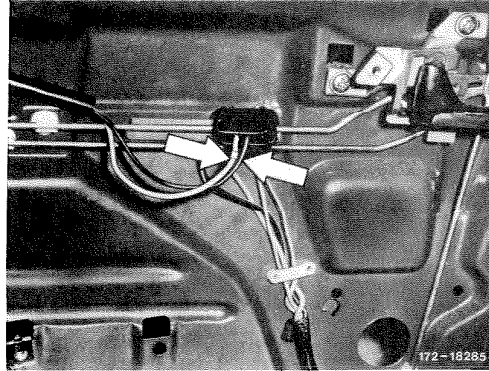

- 5 Unscrew the screw and the two nuts on window opener motor.
- 6 Remove screw bolts on window opener motor through inner door panel in inward direction.

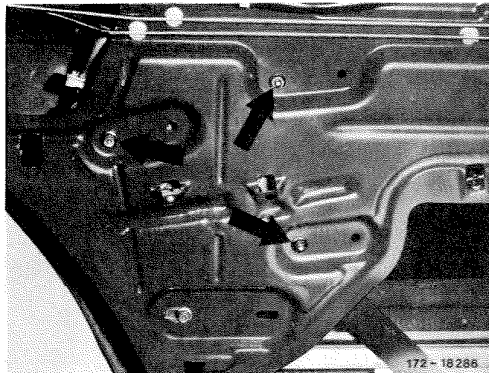


- 7 Remove window opener arm on window opener rail toward the rear and position window opener motor at upper assembly hole.
- 8 Push up crank window and secure by means of a wedge.

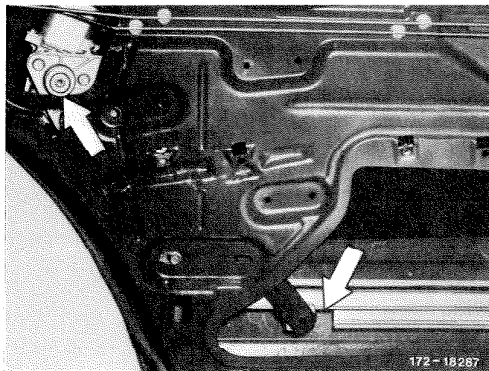


## 72-187 R and R rear door power window mechanism

---

9 Loosen upper screw on window run channel and unscrew lower screw.

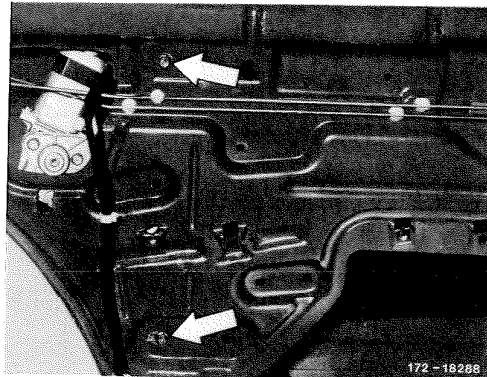

10 Swivel rear window run channel forward and remove window opener with motor in downward direction.

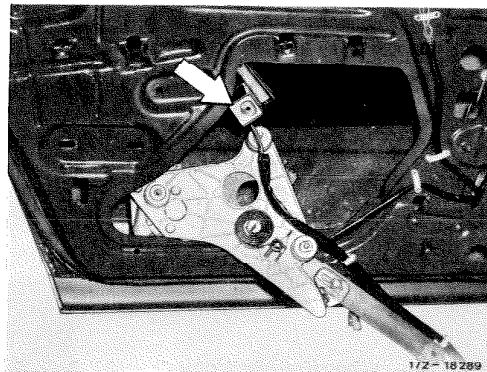

### Installation

---

**Note:** Set lower stop by means of screw (arrow) on window opener arm.

11 For installation proceed vice versa. Connect electric connections on plug coupling in such a manner that the numbers on coupling and cable are in agreement.

