


## 72-210 R and R door holder

---


### Removal

---

- 1 Remove door lining (72-100).
- 2 Pull-off sealing sheet in front range of inner door panel.
- 3 Remove lock on bolt and pull out bolt.

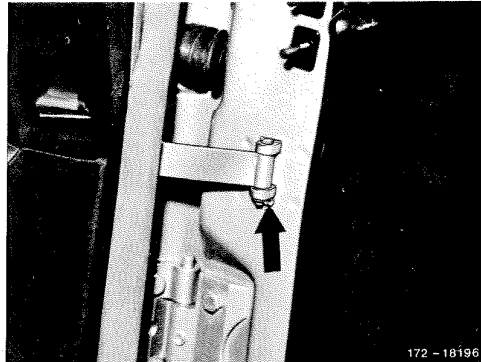

- 4 Pull-off sealing frame in range of door holder and unscrew screws.
- 5 Remove door holder.

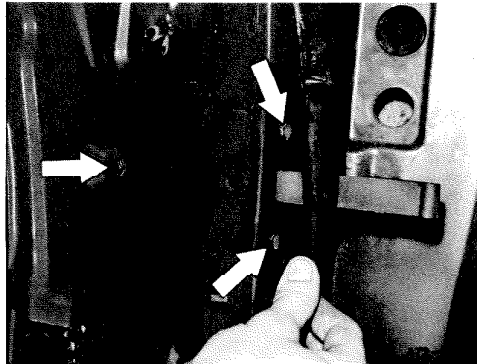

### Installation

---

**Note:** Screws are micro-encapsulated. Use new screws during installation or screws with screw locking compound. Tighten all fastening screws on door holder with 10 Nm.

- 6 For installation proceed vice versa.