


## 72-231 R and R rear door inside handle

---


### Removal

---

- 1 Remove door lining (72-101).
- 2 Pull-off sealing sheet on inside door panel in upper range.
- 3 Unscrew screws on inside actuation.

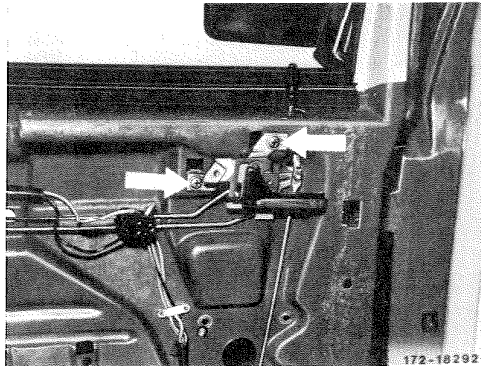

- 4 Turn inside actuation around pullrod toward the rear and disconnect pullrod.
- 5 Unclip pullrod on inside door panel.
- 6 Disconnect pullrod on door lock.

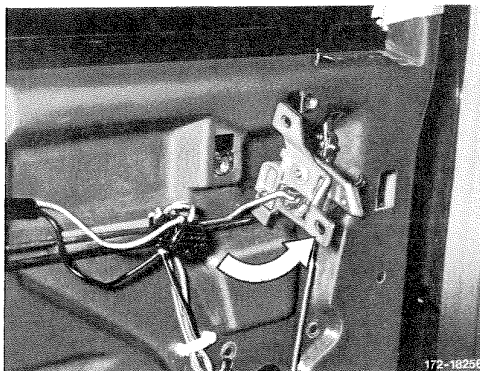

### Installation

---

- 7 For installation proceed vice versa.

#### Attention!

Set linkage of inside actuation free of play.

## 72-231 R and R rear door inside handle

---

**Note:** By loosening the two fastening screws, the inside actuation can be adjusted in height. This is necessary if the cover of the wooden lining is not properly seated.

