



Removal

- 1 Remove inside door actuation (72-231).
- 2 Remove door handle outside on rear door (72-241).
- 3 Disconnect safety linkage on door lock.

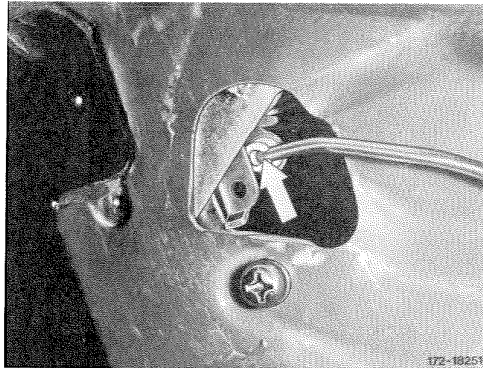

- 4 Unscrew screws on door lock.
- 5 Remove door lock on upper assembly hole on inside door panel.

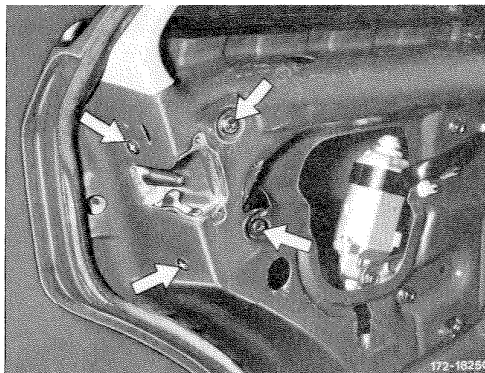

Installation

- 6 Screw-on the two visible fastening screws on face first and then screws on inside door panel and tighten to 8 Nm.
- 7 For further installation proceed vice versa.

