


Preliminary work:
 Checking function of central locking system (80-090)

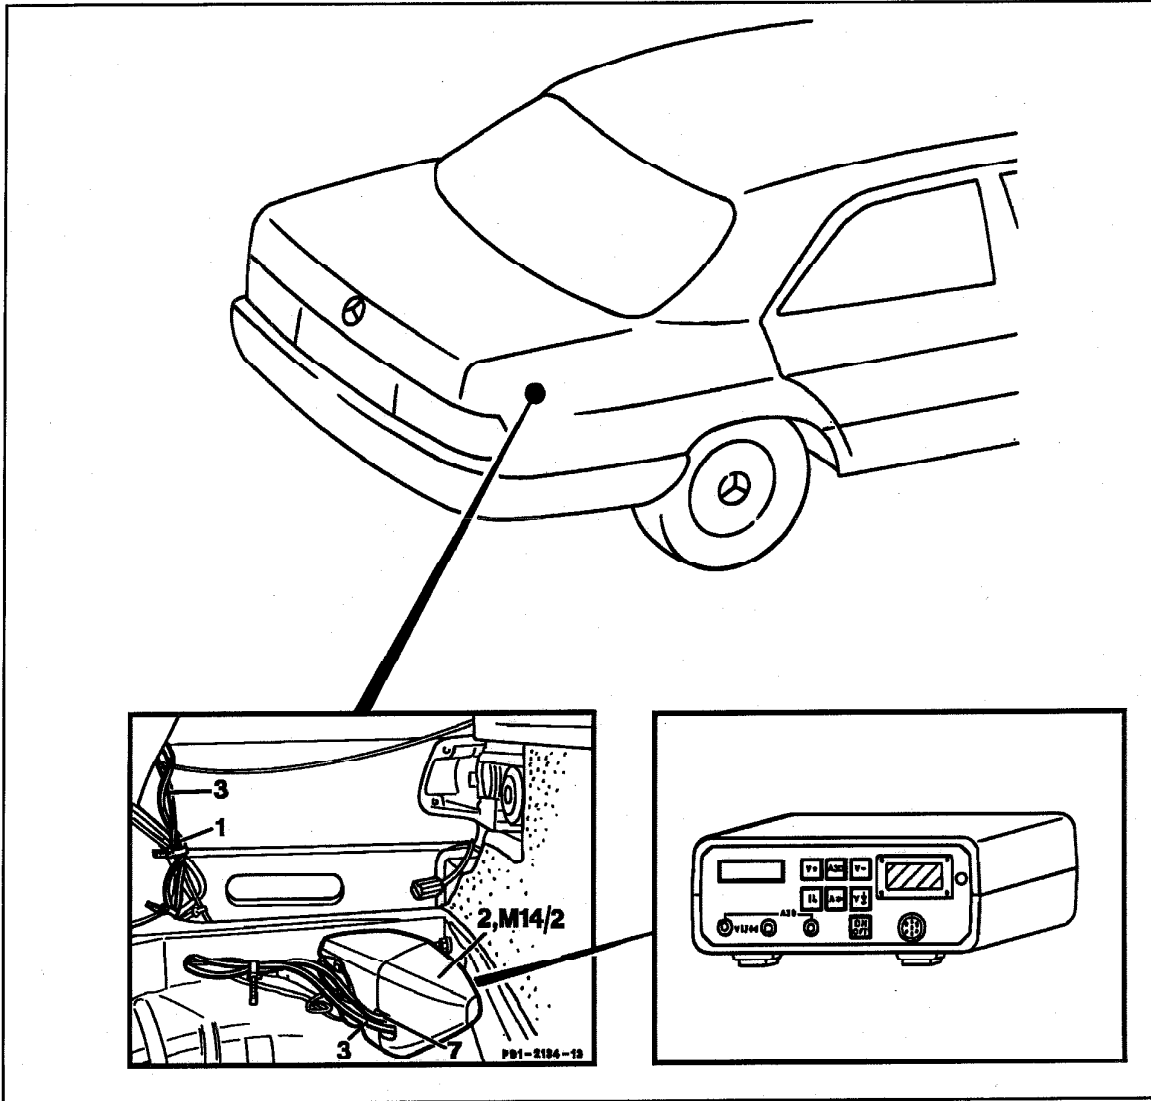

P80-0069-59

- | | |
|--|------------------------------|
| Cover above spare wheel | Swing up. |
| Holder for foam material cube (1) | Remove and install (arrows). |
| Foam material cube (2) | Pull out of trough and open. |
| Supply pump (M14/1) | Remove. |
| Pneumatic pipes or electrical cables | Pull off, fit. |
| Electric function of the central locking system and
pneumatic function of the supply pump | Check (80-104 or 80-108). |