


82-0840 Wiring diagrams power windows

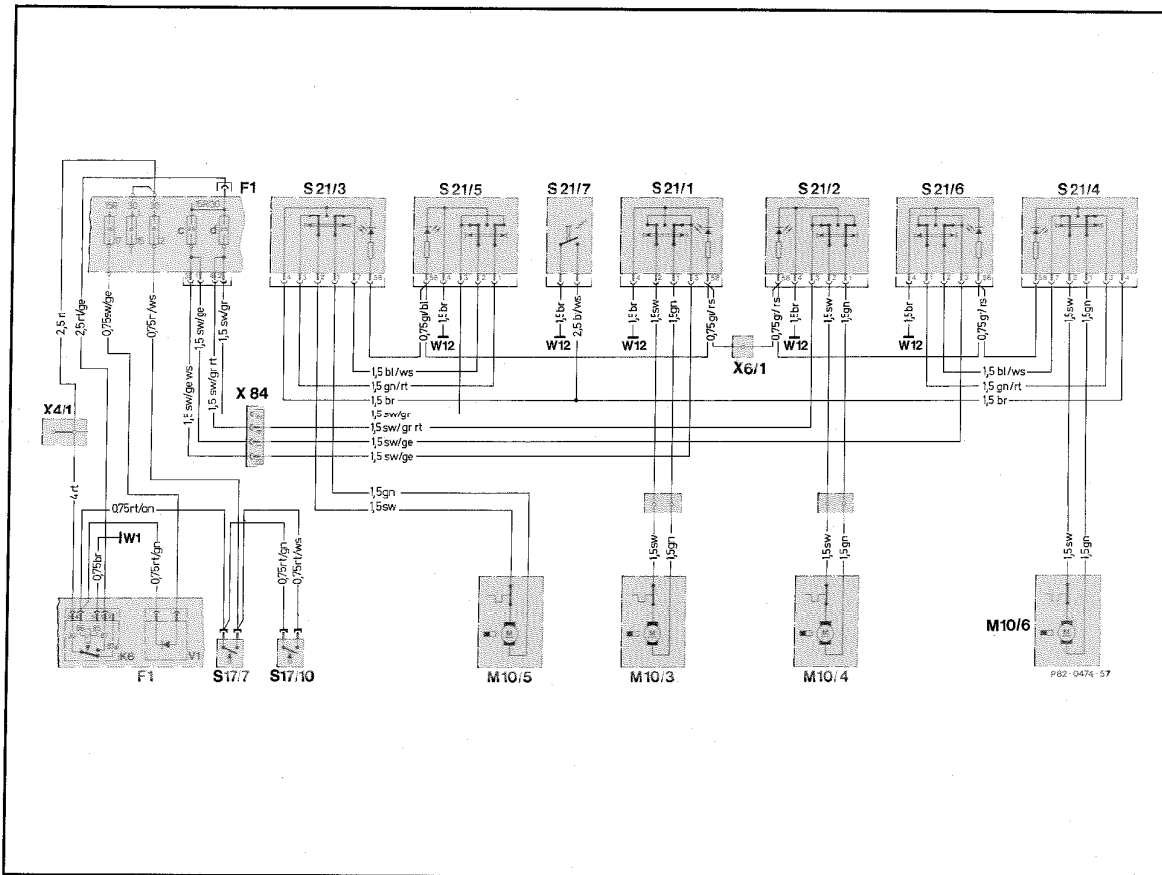

P82-0474-57

Wiring diagram 4 power windows (up to approx. 01/89)

F1	Fuse and relay box	S21/3	Left rear power window switch
K6	Power window/seat adjustment relay	S21/4	Right rear power window switch
M10/3	Left front power window motor	S21/5	Left rear power window switch (front center console)
M10/4	Right front power window motor	S21/6	Right rear power window switch (front center console)
M10/5	Left rear power window motor	S21/7	Rear power windows safety switch (center console)
M10/6	Right rear power window motor	V1	Convenience diode
S17/7	Left door switch (CF)	W1	Main ground (behind instrument cluster)
S17/10	Right door switch (CF)	W12	Ground (center console)
S21/1	Left front power window switch (front center console)	X4/1	Terminal block (circuit 30, interior) (2-pole)
S21/2	Right front power window switch (front center console)	X6/1	Terminal block (circuit 58d) (1- or 2-pole)
		X16/1	Power window voltage supply connector (4-pole)

