

## 88-330 R and R hood front seal


---

### Outside seal


#### Removal

---

- 1 Push expanding mandrel into clips.

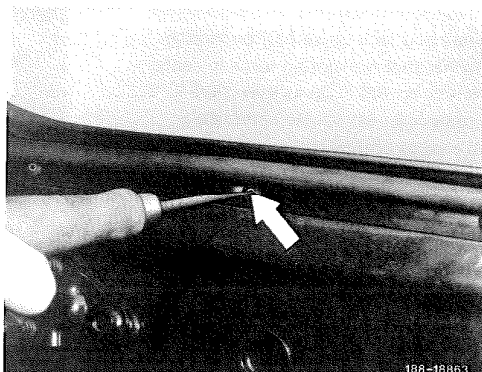

- 2 Push off lower half of clips and remove seal from engine hood.

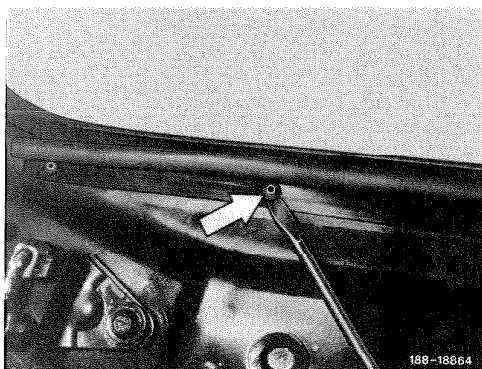

#### Installation

---

- 3 For installation proceed vice versa.