



Removal


- 1 Remove trunk lamp with switch and pull-off cable.
- 2 Unclip cable in range of trunk lid and pull out.

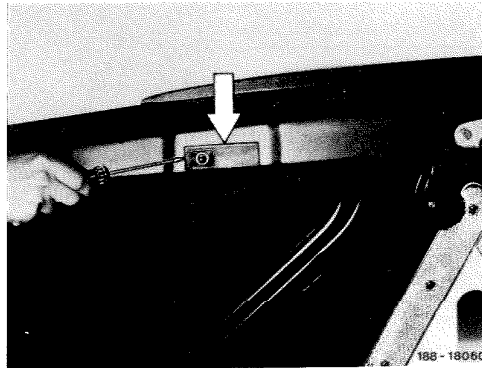

- 3 Place one rag each under both corners.

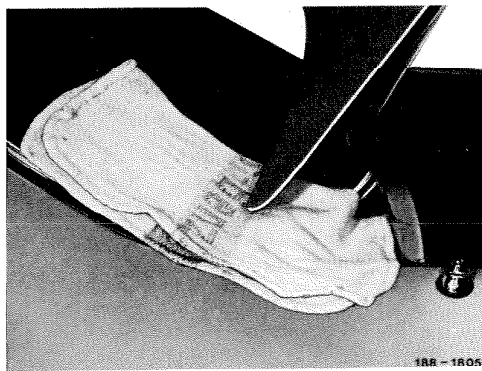

- 4 Unscrew the two screws on both sides of hinge and remove trunk lid.

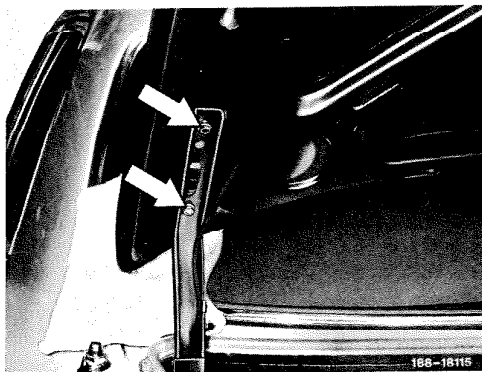

88-500 R and R trunk lid

Installation

5 Screw trunk lid to hinges and align laterally prior to tightening screws.

6 Adjust upper half of lock by means of shims for perfect opening and closing.

7 For further installation proceed vice versa.

Note: When renewing trunk lid, perform specified sealing and preserving jobs (97-400 or 97-150).

