


91-180 R and R driver seat cushion cover (coupé)


Removal

1 Remove driver's or front passenger's seat (91-100).

2 Pull plug of connecting cable between belt positioner and belt lock from holding plate.

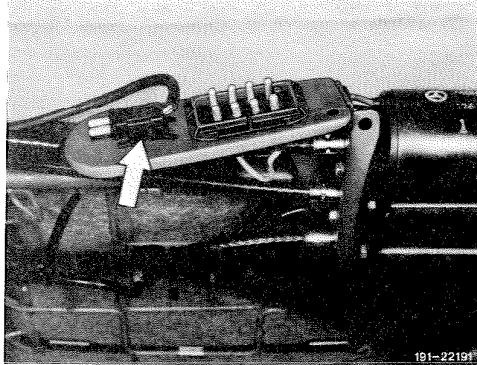


3 Pull out electric connecting cable for servomotor of backrest at plug coupling.

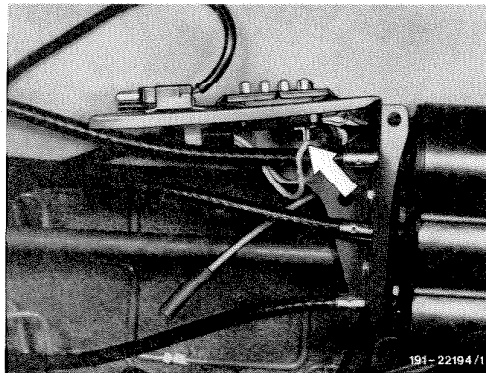


4 Unscrew guide rail on cushion frame.

Note: Unscrewing of center screw on seat guide rails requires adjustment of seat frame. With operational electric motor a vehicle battery can be connected directly to electric motor for adjusting seat frame. If the electric motor is no longer running, the motor shaft can be rotated at square mount by means of a fitting screwdriver.

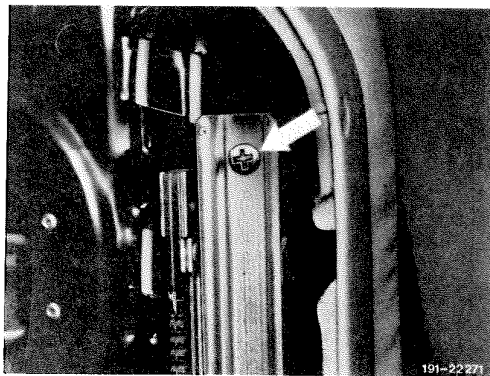


91-180 R and R driver seat cushion cover (coupé)


5 Remove screws on cushion frame lining and remove lining.

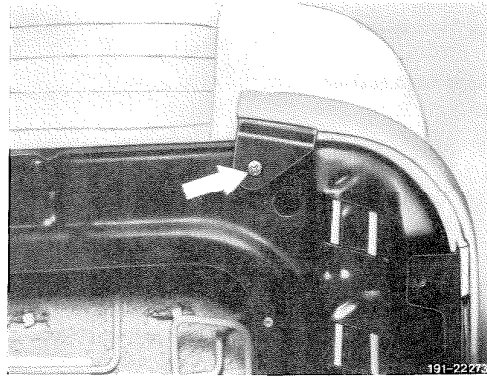


6 Unscrew fastening screws on backrest hinges.

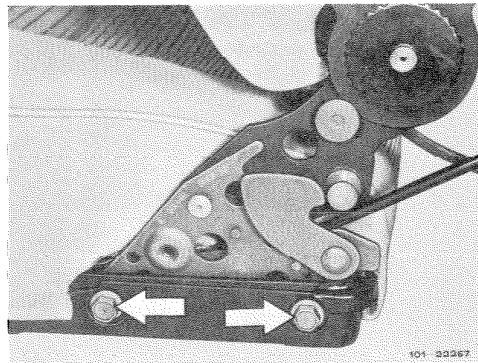

7 Slightly pull out backrest hinges on cushion frame, press off safety clip at actuating rod of vacuum element and disconnect actuating rod at backrest lock.

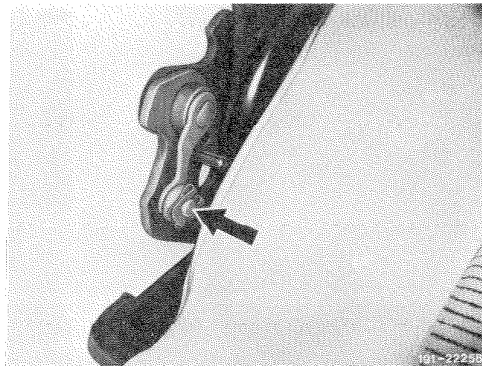


8 Remove screws at tensioning member of backrest. Slip tensioning member in upward direction and remove.

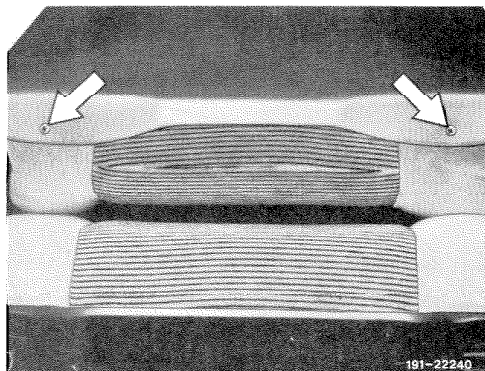


91-180 R and R driver seat cushion cover (coupé)

9 Pull vacuum line from switch.


10 Remove backrest from cushion.

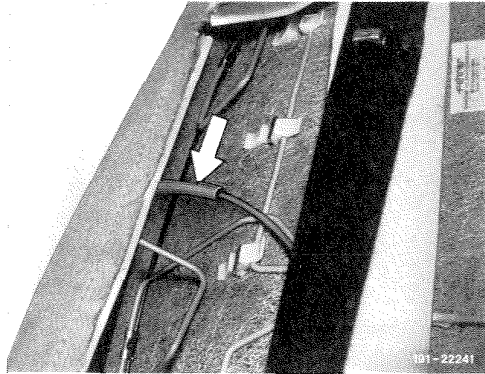

11 Compress spring core of seat cushion while simultaneously removing cover on cushion frame all around, starting at side.

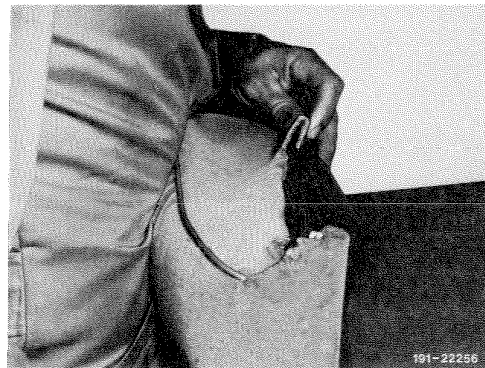

12 Open clamps on nettle fabric of seat cushion cover and pull out.

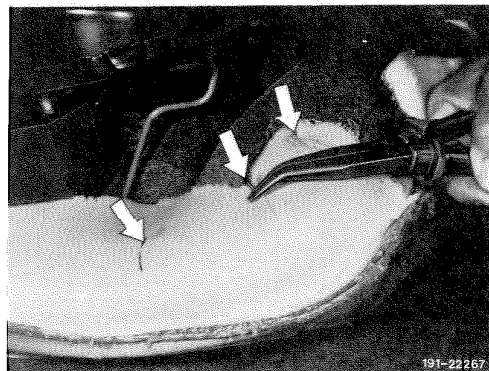

13 Disconnect hooks on wire inserts through cut-outs of rubber hair mat.

14 Remove cushion cover.

Installation

15 For installation proceed vice versa.

