


00-9005 Lifting vehicle with on-board jack

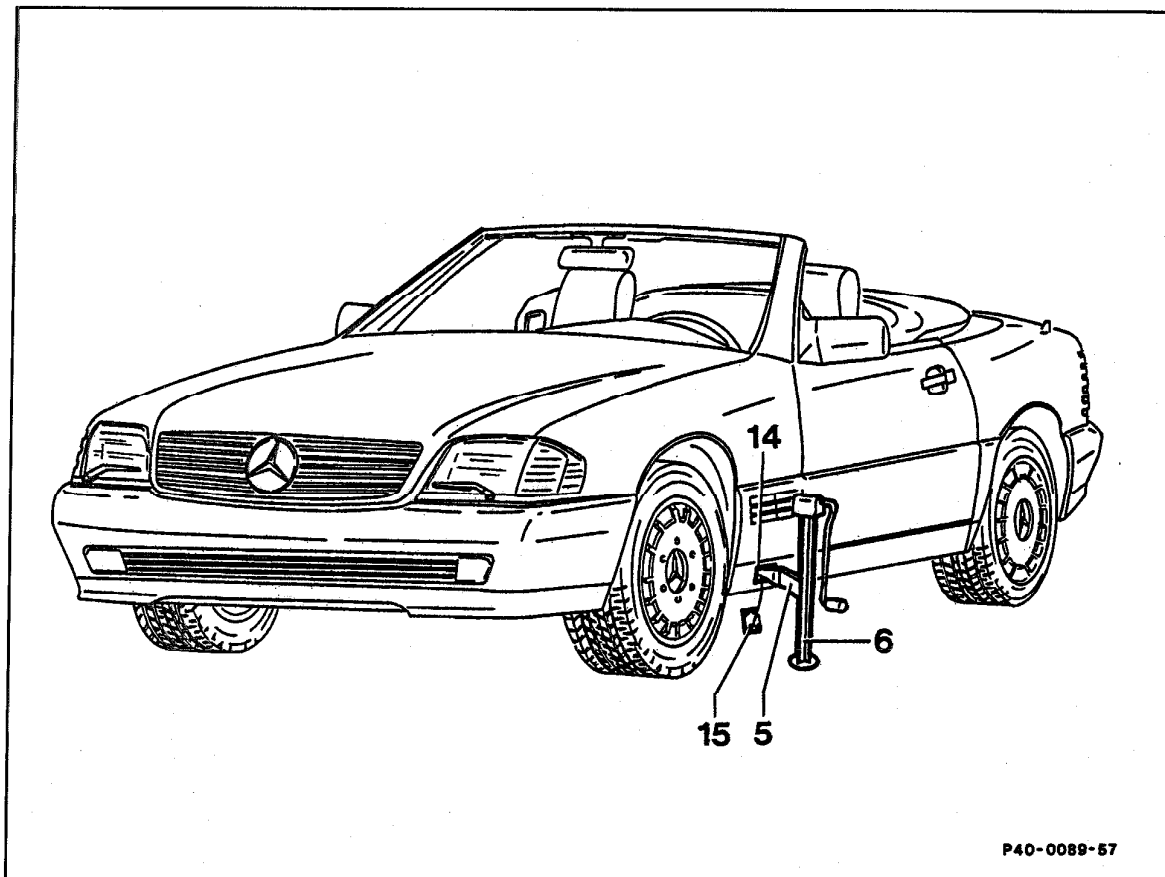

P40-0089-57

P40-0089-57

e.g. model 129

- Parking brake operate and, on vehicles with manual transmission, engage 1st gear. On vehicles with automatic transmission, put selector lever in position "P".
- Vehicle secure with wheel chocks or similar to prevent it rolling away.

Sealing plugs (model 124, 201),
sealing cap (15) (model 129) or
sealing cap (model 140) remove.

⚠ WARNING!

Align the jack so that it is always upright even on gradients.

The curb weight of the model 140 is 1900-2200 kg depending on the level of equipment. press into the respective insert pipe (14) and lift vehicle.

Mounting pin (5) of the on-board jack (6)

Note

Carefully jack up vehicle in order to avoid accidents and damage to the vehicle. Before jacking up the vehicle, always secure the vehicle with wheel chocks (part no. 110 583 01 75) or similar to prevent it rolling away.

On level ground, secure one wheel on the opposite side of the vehicle to prevent it rolling away.


On an incline, secure both wheels on the opposite side of the vehicle to prevent it rolling away.

On vehicles with manual transmission engage 1st gear. On vehicles with automatic transmission, put selector lever in position "P".

Firmly apply parking brake.

Push the mounting pin of the on-board jack fully into the front or rear insert pipe in the outer frame side member.

Apply jack vertically, even on an incline.

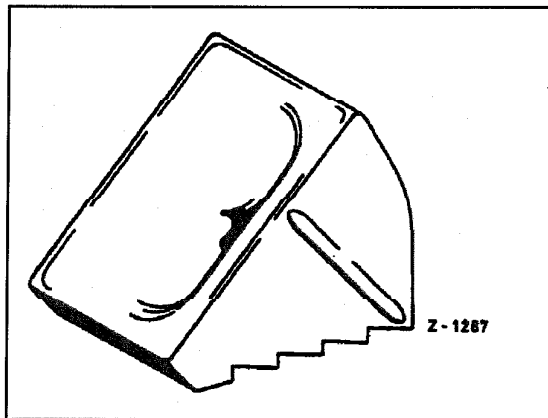


Z-1287

Z-1287

00-9005 Lifting vehicle with on-board jack

The insert tubes on newer models are covered by flaps (arrow).

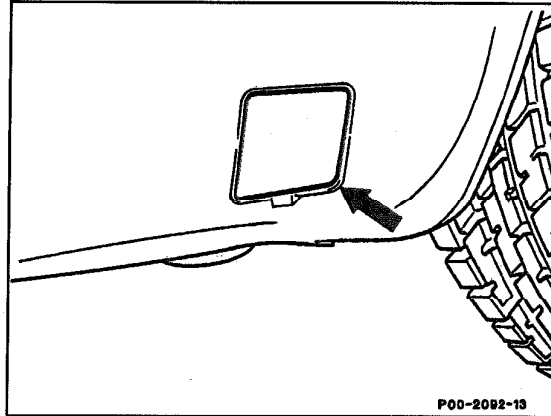

e.g. model 140

P00-2092-13

P00-2092-13