


## 54-253 R and R speedometer

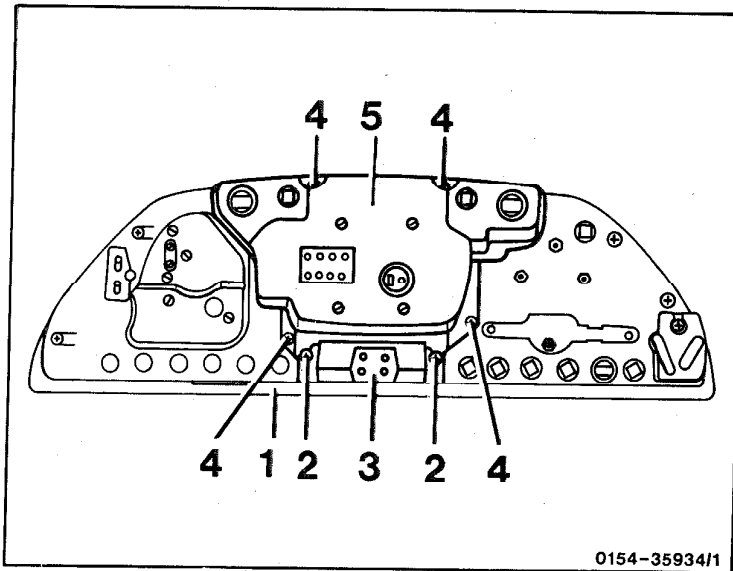

0154-35934/1

Instrument cluster (1) . . . . .	remove, reinstall (54-250)
Screws (2) . . . . .	screw out, screw in
Outside temperature gauge (3) . . . . .	remove, insert
Screws (4) . . . . .	screw out, screw in
Speedometer (5) . . . . .	remove, insert

### Note

When replacing the speedometer on vehicles with ASD or ASR it is necessary to install the function display from the speedometer removed in the new speedometer.