


## 54-391 Renewing bulb for ashtray light

---

1 Pull out ashtray and remove insert.



2 Unscrew fastening screws.

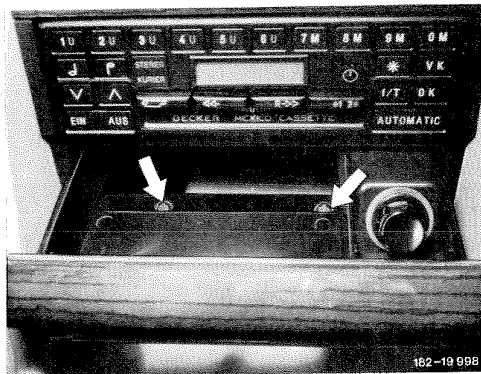

3 Take out ashtray, pull out electrical connection for cigar lighter and socket with bulb, exchange bulb.

