



54-395 Sun visor with illuminated mirror


The mirror integrated in sun visor has a light which is switched on by swinging cover (1) upwards.

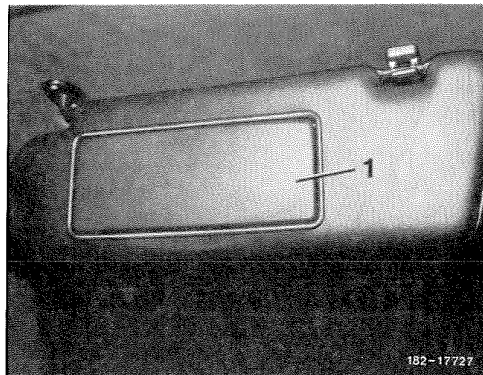

The lights are located at the left and right adjacent to mirror (arrows).

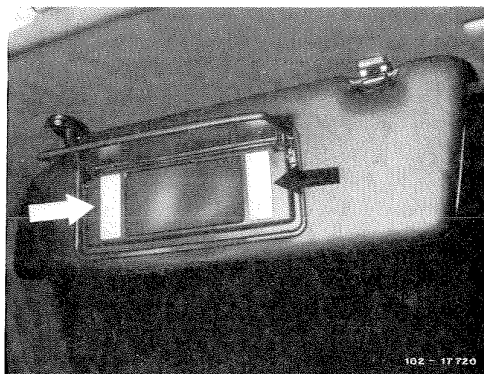


The voltage (positive and negative) for the lights is supplied by way of a pair of contacts (arrows) integrated in holder.

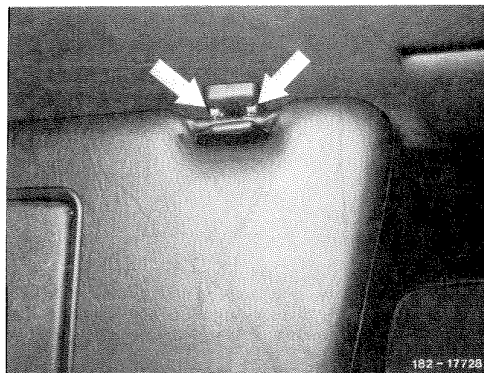

54-395 Sun visor with illuminated mirror

Unclip mirror for exchanging bulbs.

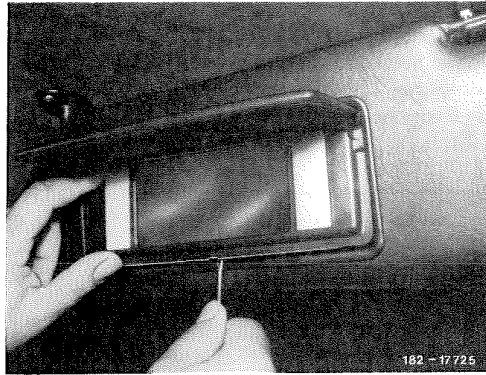

The switch contact for switching on the lights is located on hinge of cover (arrow).

