

54-545 R and R cruise control switch


A. Model 107, 123

Removal

- 1 Remove combination switch.
- 2 Remove switch (1) from combination switch (2).

Installation

- 3 For installation proceed vice versa.
- 4 Operational checkup on road.

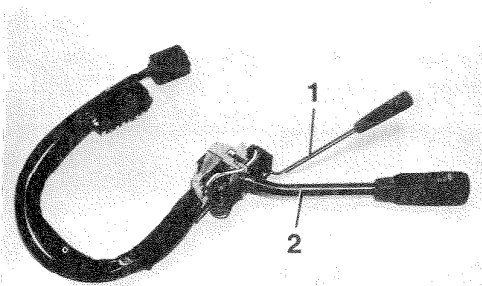


154-11976/1

B. Model 126

Removal

- 1 Remove combination switch.
- 2 Pull switch (1) from guide of combination switch (2), while removing fastening screw for this purpose.

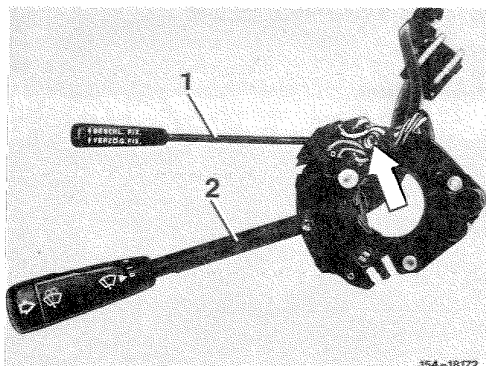


154-18172

- 3 Remove rubber grommet (3).

Installation

- 4 For installation proceed vice versa.
- 5 Perform function test on road.

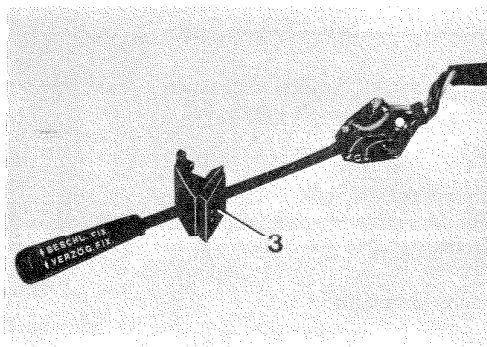

154-18173