

## 67-400 R and R/adjust rear side glass (coupe)

---


### Removal

---


1 Remove rear side wall lining (68-456) (do not remove screw of safety belt on side member).

2 Open rear side window.

3 Remove screws on shaft cover rear.

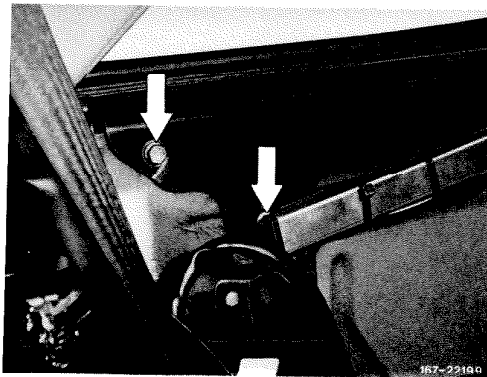

4 Remove screws at shaft cover front.

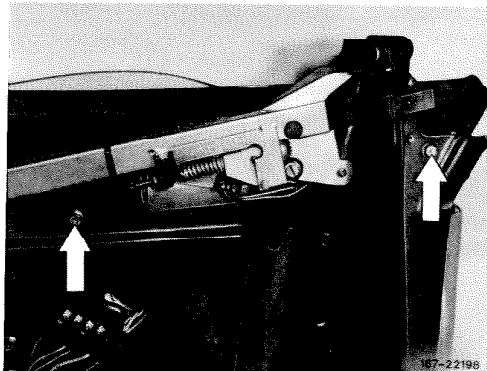


## 67-400 R and R/adjust rear side glass (coupe)

---

5 Close rear side window until screws of window opener rail show up in assembly hoses.

6 Remove screws on window opener rail and rear side window in upward direction.

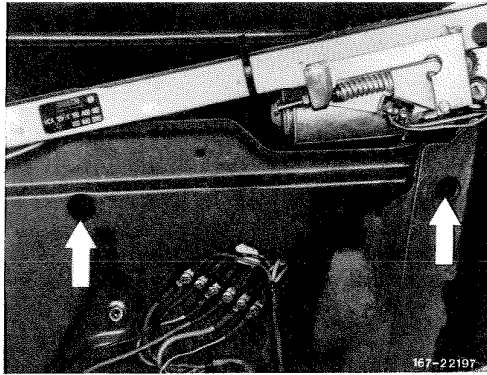

### Installation

---

7 For installation proceed vice versa.

**Note:** Adjust rear side window prior to assembly of side wall lining (67-420).