



68-130 R and R glove compartment lid lock

Removal


1 Unscrew screws and remove handle with locking cylinder.

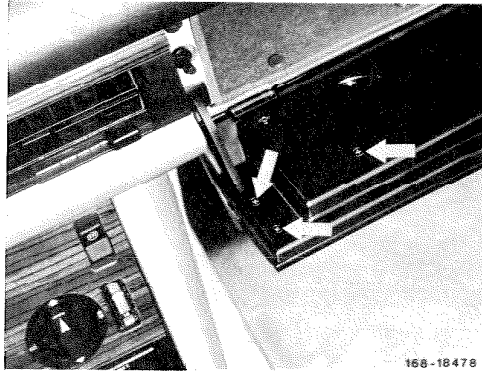

2 Unscrew screws and take off wooden trimstrip.

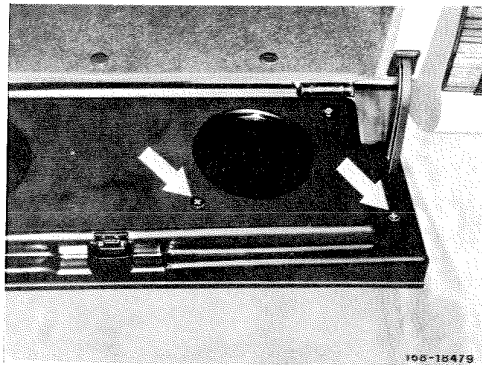

3 Unscrew screws on lock and remove lock with linkage.

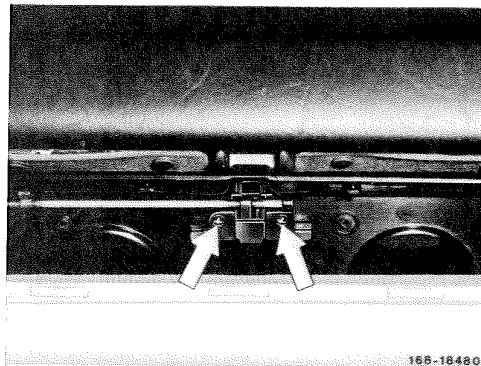

68-130 R and R glove compartment lid lock

Installation

4 For installation proceed vice versa.

Note: When inserting handle with locking cylinder, preload driver on actuating shaft by means of a screwdriver and insert handle with locking cylinder.

