


**Removal**

---


- 1 Remove both floor mats for front seats.
- 2 Remove covering on shift lever (68-230).

3 Remove radio.


4 Pull-off control knobs for blower and air distributor switch.

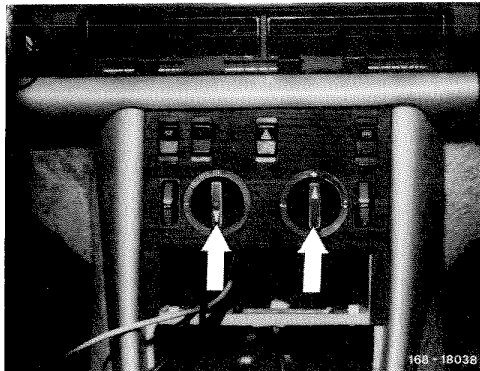

5 Unscrew nuts on control unit.

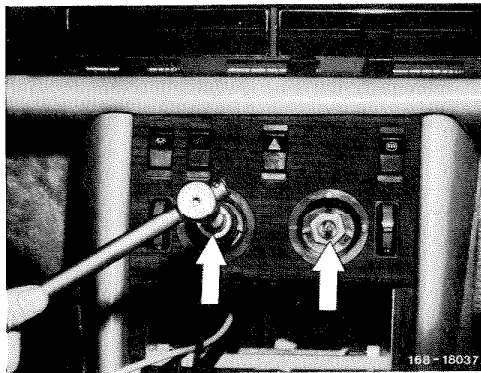


6 Remove molding at bottom, pull-off plug connections on switches and remove molding.

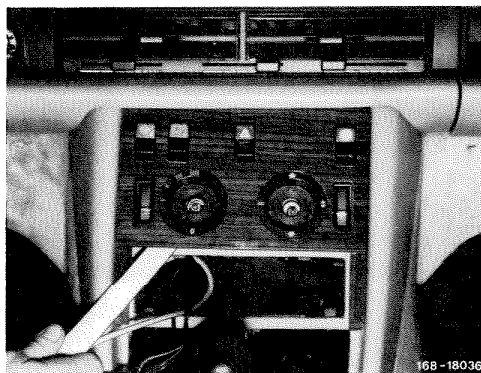


## 68-200 R and R center console

---


- 7 Unscrew both screws at both sides on tunnel front.

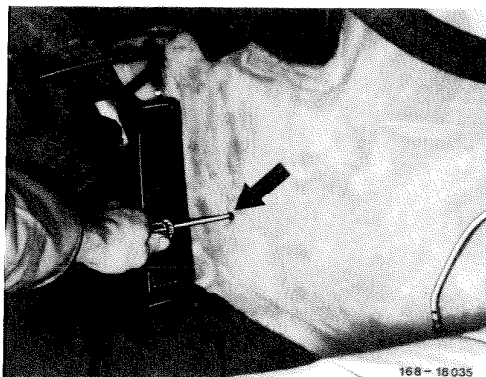


- 8 Remove rug from tray and unscrew screw.

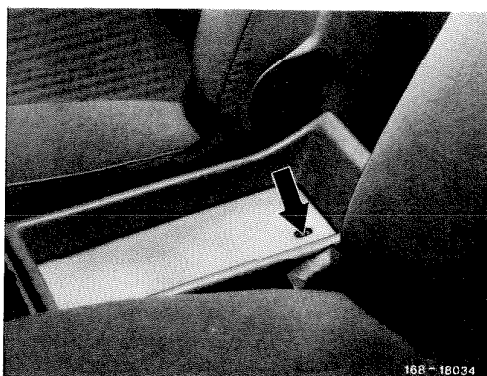


- 9 Unscrew screws on floor shift.

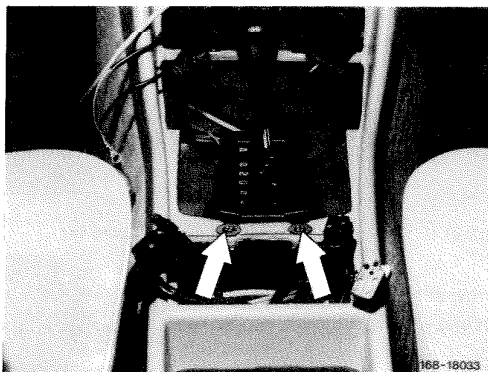

- 10 Unscrew screws on instrument panel.

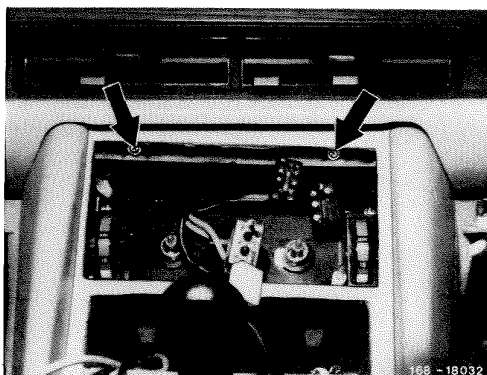


11 Push off clip and disconnect cable control for jet at center console rear.

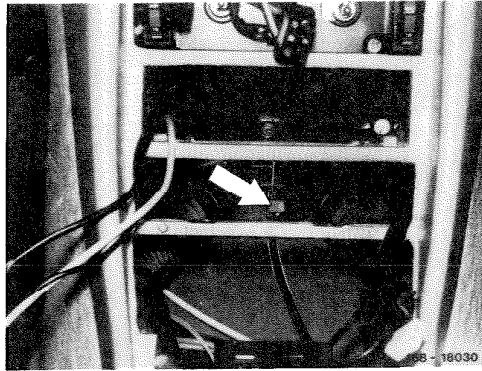

12 Lift center console at the rear and move outwards at instrument panel, while spreading center console at front bottom.

**Attention!**

Make sure that the instrument panel is not damaged in upper connecting range.

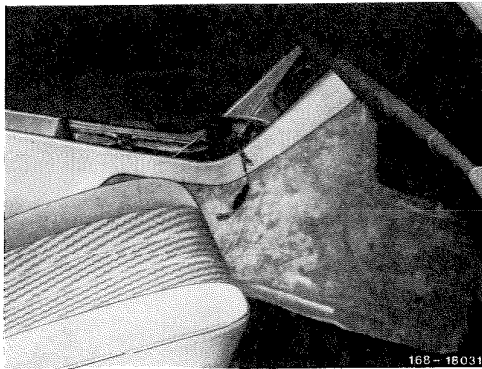

**Installation**

---

13 For installation proceed vice versa.

**Note:** When mounting control knobs, make sure that the symbols on control knobs are in alignment with function.